



Redexim

Easy-Core 4

Lawn aerator with Honda GX160 engine

Applies to:

S0001709 - Easy-Core 4

ORIGINAL INSTRUCTION MANUAL



Manufactured by Tracmaster Ltd

Before operating the machine, read the operating instructions and observe the warnings and safety instructions.

Manufacturer's information

Tracmaster Ltd
Units 6-7 Winterpick Business Park
Hurstpierpoint Road
Wineham
Henfield
BN5 9BJ
UNITED KINGDOM
Tel: +44 (0)1444 247689
www.tracmaster.co.uk

Machine details

Model: Redexim Easy-Core 4 machine

Serial no.:

E	4	-	1	1	1	1	1
---	---	---	---	---	---	---	---

Engine serial number:

G	A	A	A	A	-	1	1	1	1	1	1	1
---	---	---	---	---	---	---	---	---	---	---	---	---

Date of purchase:

D	D	-	M	M	-	Y	Y	Y	Y
---	---	---	---	---	---	---	---	---	---

Date of purchase:

Table of contents

1.0	Introduction.....	2
1.1	Welcome	2
1.2	About this manual	2
2.0	What the machine is designed for	3
2.1	Applications	3
3.0	Specifications.....	4
4.0	Unpacking and assembly	5
4.1	Diagram of main components	5
4.2	Unpacking Instructions	5
5.0	Safety instructions – Before operation	6
5.1	Basic safety instructions	6
5.2	Main components and controls.....	6
5.3	Motor and drive	6
5.4	Control lever	6
5.5	Tines	6
5.6	Solid spike tines & hollow core drill tines	7
5.7	Commissioning	7
5.8	General safety instructions.....	7
5.9	Engine-specific safety instructions	7
5.10	Hazard pictorial explanations	8
6.0	Safety instructions Commissioning and operation	10
6.1	How to start the motor.....	10
6.2	How to stop the engine	11
6.3	Safety Equipment	11
6.4	Operation	11
6.5	Procedure in case of unexpected shutdown	13
6.6	Residual risks of the Easy-Core 4 lawn aerator	13
7.0	Maintenance.....	14
7.1	Schedule	14
7.2	Basic maintenance.....	14
7.3	Transmission.....	15
7.3.1	Check gearbox oil level	15
7.4	Engine.....	15
7.4.1	Check engine oil level	15
7.4.2	Change engine oil	15
7.4.3	Air filter	16
7.5	Cleaning.....	16
7.6	Troubleshooting	17
7.6.1	Machine.....	17
7.6.2	Engine.....	17
7.6.3	Lubricant	17
8.0	Transport, storage, and handling.....	18
8.1	Transport	18
8.2	Storage	18
8.3	Handling	18
9.0	Service certificate	19
10.0	EC Declaration of Conformity	20
11.0	Warranty information.....	21

1.0 Introduction

1.1 Welcome

Welcome to your new aerator and thank you for choosing Redexim.

We are confident that you will be more than satisfied with your machine.

Your machine is covered by a comprehensive warranty. However, the service life of your Redexim machine depends on a number of factors. It is important that you read this manual carefully and follow the instructions for operation, maintenance, and care.

1.2 About this manual

It is important that you read and understand this manual carefully. Reading and understanding this manual should prevent you from operating the Easy-Core 4 lawn aerator incorrectly and thus extend the service life of the machine.

This manual also contains important safety information about your machine. You must observe all safety instructions at all times. Redexim machines are frequently updated and improved, so models may vary due to different specifications.

All illustrations, descriptions, specifications, and technical data in this manual are correct at the time of printing.

If you have any questions about this manual, please contact Redexim.



IMPORTANT!



READ THIS MANUAL CAREFULLY

2.0 What the machine is designed for

2.1 Applications

The Redexim Easy-Core 4 lawn aerator is designed for aerating lawns and other turf areas.

The advantage of aerating a lawn is that it allows air, water, and nutrients to reach the roots of the grass, relieves soil compaction, and removes unwanted thatch from beneath the surface.

The tines of the Redexim Easy-Core 4 lawn aerator are only designed for use on lawns with a soil depth of more than 100 mm. If the Easy-Core 4 lawn aerator is used on soil with a depth of less than 100 mm, the machine may be damaged.

Before operating the Easy-Core 4, the operator **MUST** check the depth of the soil. This can be done easily with a garden fork.

DO NOT use the Redexim Easy-Core 4 lawn aerator for any purpose other than aerating lawns.

Operating the machine on non-grass surfaces such as concrete or asphalt will damage the Easy-Core 4 lawn aerator.

Do NOT expose the lawn to high temperatures or dry conditions after aeration.

Water the lawn if necessary to ensure that the grass benefits from the treatment.

3.0 Specifications


ENGINE	
Engine manufacturer	Honda
Engine model	GX160
Engine type	Four-stroke single-cylinder engine, OHC
Net engine power	3.6 kW (4.8 hp) @ 3600 rpm
Engine shaft size	¾" straight
Spark plug	BPR6ES (NGK) / W20EPR-U (DENSO)
Spark plug gap	0.70 - 0.80 mm
Type of engine ignition	Recoil starter
Cold start system	Throttle
Fuel tank capacity	3.1 liters
Fuel type	Unleaded
Fuel consumption	1.4 liters per hour @ 3600 rpm
Air filter	Paper
Nominal engine speed	3600 rpm
Operating speed	2800 rpm
Engine oil	SAE 10W-30, API SJ or higher, for general use
Engine oil capacity	0.6 liters
Dry weight	15.1 kg

The engine power specified in this table is the net power tested on a production engine for the engine model and measured at a specific speed in accordance with SAE J1349.

MACHINE	
Model	Easy-Core 4
Working width	400
Tine type	Solid spikes & hollow drill tines
Dimensions of solid tines (diameter x length)	10 mm x 85 mm
Dimensions of hollow tines (diameter x length)	21 mm outer / 15 mm inner x 85 mm
Number of tines mounted during operation	4
Adjustment of tine depth	None
Core discharge	To the rear
Wheel types	Solid foam
Steering handle	Foldable
Noise level	99 dB(A)
Vibration acceleration value	5.4 ms ²
Maximum gradient when operating on a slope	10 degrees
Weight	103 kg
Dimensions (length x width x height)	1000 mm x 650 mm x 680 mm

4.0 Unpacking and assembly

4.1 Diagram of the main components

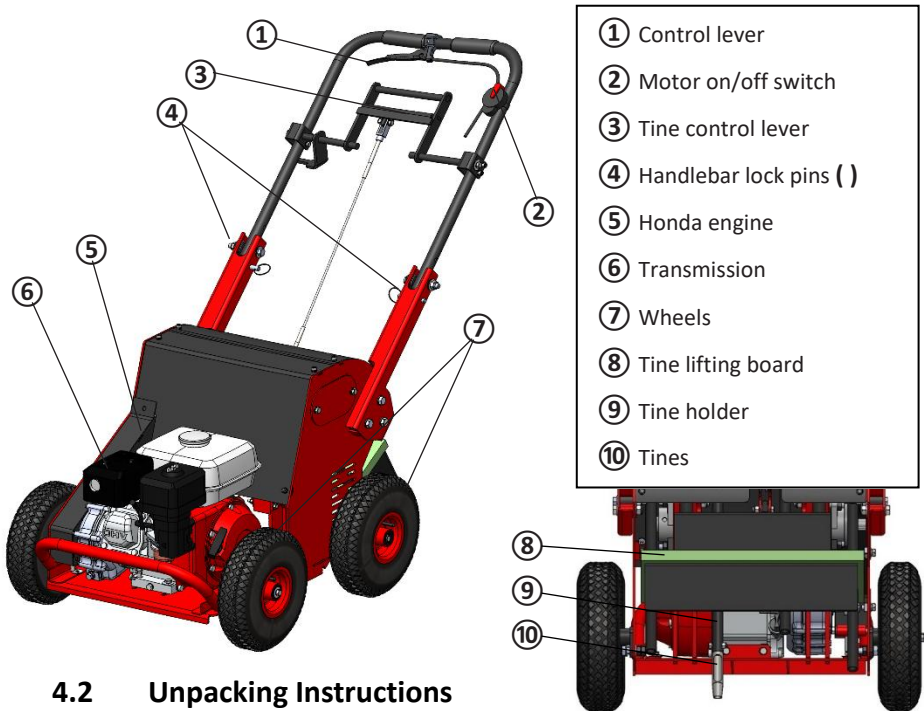

4.2 Unpacking Instructions

The Easy-Core 4 lawn aerator is usually delivered on a pallet, covered with pallet wrap and secured with transport brackets attached to the wheels.

Carefully remove the outer packaging.

Locate and remove any cable ties or straps securing the aerator to the pallet.

Use 13 mm wrenches to remove the bolts on the transport brackets. Once the brackets are removed, replace the washers and bolt them back onto the wheels to ensure they are properly tightened.

Swivel the folded upper part of the handlebar until it is in position.

Insert the handlebar lock pins (④ in the image above) into the holes to lock the handlebar in the operating position.

Push the machine forward safely and carefully off the pallet.

Dispose of the pallet and other packaging materials. Recycle where possible.

5.0 Safety Instructions – Before Operation

5.1 Basic safety instructions

Before operating the machine, read and understand this operating manual.

5.2 Main components and controls

Below is a description of the main components of the Easy-Core 4 lawn aerator and how they work.

5.3 Engine and drive

The Honda GX160 (Fig. 1) is a four-stroke engine that runs on standard unleaded fuel.

Since the engine is air-cooled, it is important to keep the grille covering the return cable free of debris.

The engine air filter cleans the air drawn into the engine. A clogged air filter reduces performance.


The engine is equipped with a fuel on/off lever and a choke lever. Read the engine's operating manual to understand how these levers work.



5.4 Control levers

The tines of the Easy-Core 4 lawn aerator are operated using the lever located under the top of the handlebar (Fig. 2).

PLEASE NOTE THAT THIS IS A TWO-STAGE LEVER. THE GRAY BUTTON (FIG. 2) MUST BE PRESSED BEFORE THE MAIN LEVER CAN BE PULLED UP.

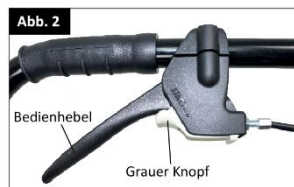

Once the drive is activated, it transmits power via the gearbox to the tine bars, which then rotate. The tines that penetrate the surface are held at the end of each tine bar and are pressed into the ground before being retracted as the tine bars rotate.


5.5 Tines

Four tines of the same type must always be mounted for the Easy-Core 4 lawn aerator to function properly.

Each tine must be firmly anchored in the tine bars. Each tine must be fitted with an M6X screw and nut to secure it in the tine bar (Fig. 3A, 3B, 3C).

Use a 10 mm wrench to tighten the tines.

The tightness of the tines or corers must be checked at regular intervals during operation.

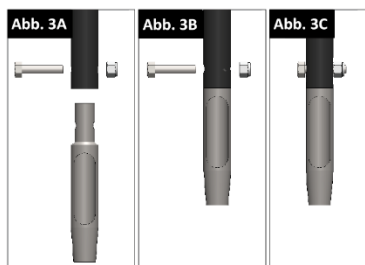

5.6 Solid spike tines & hollow core tines

The Easy-Core 4 lawn aerator comes with a set of 10 mm solid spikes and hollow core tines (Fig. 4). Four identical tines must always be used when setting up and operating the aerator.

Solid tines help nutrients reach the soil roots and improve drainage.

In addition to the advantages listed for solid tines, hollow tines reduce surface compaction by removing a section of soil each time a tine is punched into the ground.



5.7 Start-up

Before operation, it is necessary to check the engine oil level and, if necessary, add engine oil to the levels specified in the table in section 6.1.

The engine fuel tank does not contain fuel and must therefore be filled to the recommended level before use. For more information, refer to the engine manual.

5.8 General safety instructions

Be aware of all safety requirements for the machine.

Before each use, visually inspect the machine for operational safety, complete components, and secure protective devices.

Read and observe the warning and information signs on the machine.

Cordon off the work area to prevent public access.

Before starting work, clear the area of objects such as stones or sticks that could damage the machine.

Do not operate the machine if you are under the influence of alcohol or drugs. This device may only be operated by persons who are both physically and mentally fit.

Only work in good light and with good visibility.

Do not work in extreme temperatures or bad weather.

Wear the correct personal protective equipment as described in this manual.

Operator clothing should not be loose-fitting, and shoes should be closed and provide good support.

Know how to stop the machine in an emergency.

5.9 Engine-specific safety instructions



GASOLINE IS FLAMMABLE. ALWAYS STOP THE ENGINE AND MAKE SURE THE FUEL TAP IS CLOSED BEFORE REFUELING, TRANSPORTING, CLEANING, OR MAKING ADJUSTMENTS TO THE MACHINE.

Do not smoke or use open flames when refueling.

Use only unleaded gasoline from designated fuel containers. Refuel only outdoors and replace the fuel cap securely.

Do not mix oil with the fuel.

Leave 25 mm (1") of space in the fuel tank when refilling.




Clean up spilled gasoline immediately.

Always start the engine outdoors. Starting an engine in a confined space can lead to the inhalation of toxic substances.

Avoid contact with the engine and exhaust during operation, as they become hot. Allow the engine to cool before touching or storing it.

Never tamper with the engine's control settings.

5.10 Hazard Pictorial Explanations

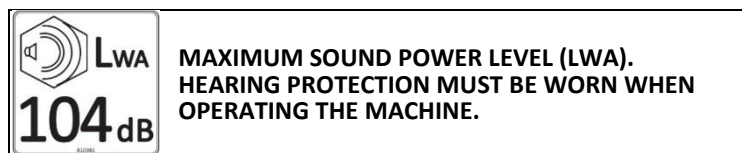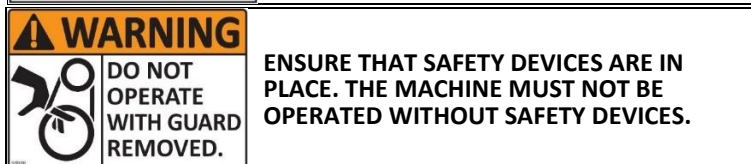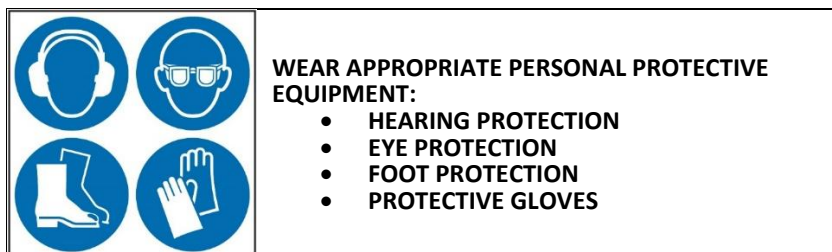







It is important that these stickers are in good condition, legible, and located in the correct positions on the Easy-Core 4 lawn aerator.

Do not use the device if any of these stickers are missing or damaged.

If stickers are missing or damaged, they must be replaced.

6.0 Safety instructions Commissioning and operation

6.1 To start the engine

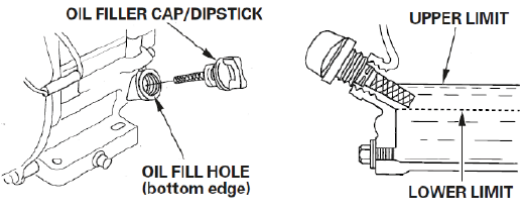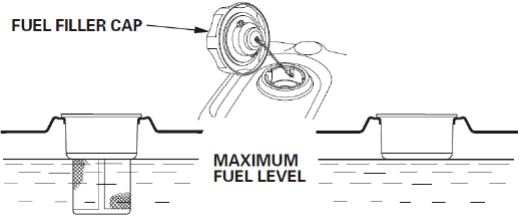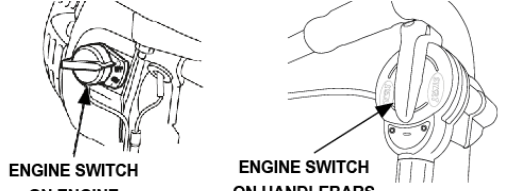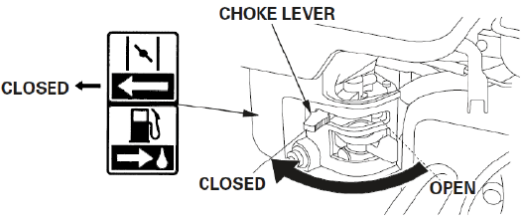Check the engine oil level using the oil dipstick provided. If the dipstick is free of oil, fill with SAE 10W/30 oil, API SJ or higher.	 OIL FILLER CAP/DIPSTICK OIL FILL HOLE (bottom edge) UPPER LIMIT LOWER LIMIT
Check the fuel level. Refill as needed and according to the fuel tank type – see diagram.	 FUEL FILLER CAP MAXIMUM FUEL LEVEL
Turn the engine ignition switch to the ON (I) position. (Not installed on all engine models, but on all handlebars).	 ENGINE SWITCH ON ENGINE ENGINE SWITCH ON HANDLEBARS
Turn the fuel tap on the engine carburetor to ON. If the engine is cold or has not been used recently, set the choke lever on the carburetor to ON.	 CHOKE LEVER CLOSED CLOSED OPEN

Slowly pull the engine recoil handle until it engages, then pull firmly and quickly to start the engine.

Do not let the starter handle kick back against the engine. Return it slowly to avoid damaging the starter.

If the choke lever was activated after starting the engine, return it to the OFF position after a few seconds of engine running.

6.2 To stop the engine

Release the control lever (Fig. 2).

Turn the ON/OFF switch on the handlebar to the OFF (O) position (Fig. 5A or 5C). If the engine has an ON/OFF switch, turn it to the OFF position.



Turn the fuel tap lever on the motor to the OFF position.

Make sure that the tines have stopped before moving the machine.



CAUTION: THE EXHAUST COVER MAY BE HOT – DO NOT TOUCH.

6.3 Safety Equipment

The operator of the Easy-Core 4 lawn aerator must wear appropriate PPE, including :

- Hearing protection
- Gloves
- Safety shoes
- Safety glasses

6.4 The operation

Before aeration can be carried out, the lawn must be mowed short and cleared of objects such as stones or sticks that could damage the lawn aerator.



CAUTION: AERATING LONG GRASS WILL QUICKLY DAMAGE THE MACHINE'S COMPONENTS. THE GRASS SHOULD BE MOWED BEFORE AERATING.

IMPORTANT: Use a garden fork to test the depth of the lawn. You should be able to push the fork effortlessly up to 100 mm deep into the ground.



CAUTION: IF THE LAWN DEPTH IS NOT CHECKED, THE TINES OR CORING TOOLS AND THE MACHINE WILL BE DAMAGED AND MAY RESULT IN INJURY. IT WILL ALSO VOID ANY WARRANTY.

- ! Do not operate the engine in enclosed spaces where dangerous carbon monoxide fumes can accumulate.
- ! Do not change the settings of the engine regulator or increase the engine speed.
- ! Do not operate the lawn aerator on wet lawns or in wet weather. Avoid operating the machine in bad weather conditions, especially if there is a risk of lightning.
- ! Do not operate the lawn aerator on wet lawns or in wet weather. Avoid operating the machine in bad weather conditions, especially if there is a risk of lightning.
- ! Only operate the machine in daylight or under good artificial lighting.
- ! Always ensure you have a secure footing on slopes. Do not use the aerator on slopes greater than 10° and always work across the slope, not up and down.
- ! Be extremely careful when changing direction on slopes.
- ! Walk, run, run.

- ! Be extremely careful when driving backwards or pulling the machine towards you.
- ! Never pick up or carry the machine while the engine is running.
- ! Do not place your hands or feet near or under moving parts. Always keep away from the tines/cores.
- ! Do not operate the tines/cores when transporting the machine to and from the work area or when crossing surfaces other than grass.
- ! Never operate the machine with defective protective devices or without safety devices, e.g., deflectors and/or catchers.
- ! Hollow tines should only be used in damp soil conditions.
- ! Hardcore or debris located beneath the surface of the turf can damage the machine.

Once the safety checks have been completed, set the ON/OFF switch to the middle position ON (I) (Fig. 5B).

Release all levers by letting go of them before starting the engine.

Start the engine using the correct procedure.

Press the gray button under the control lever (Fig. 6A) and then lift the control lever (Fig. 6B) to engage the drive and rotate the tines in their raised position. You can release the gray button once you have lifted the control lever.



PLEASE NOTE THAT THIS IS A TWO-STAGE LEVER. THE GRAY BUTTON MUST BE PRESSED BEFORE THE MAIN LEVER CAN BE PULLED UP.

Push the tine control lever (Fig. 7) forward to lower the tine lift board. This allows the rotating tine bars to fall into a vertical position where the tines penetrate the ground.



When the tines begin to penetrate the ground, they begin to drive the aerator forward.

EXERT A LIGHT PULL ON THE HANDLEBAR WHILE OPERATING THE EASY-CORE 4 LAWN AERATOR, AS THIS WILL ENSURE THAT THE TINES AND TINE RODS REMAIN IN A VERTICAL POSITION. THE TINES MUST BE VERTICALLY ALIGNED TO ACHIEVE MAXIMUM AERATION DEPTH AND EFFICIENT PROPULSION.

Turn off the engine:

- a) Whenever you leave the machine;
- b) Before refueling.

Turn off the engine and disconnect the spark plug connector before:

- a) Removing blockages;
- b) checking, cleaning, or working on the machine;
- c) After impact with a foreign object;

- d) If the machine starts to vibrate abnormally.

Reduce the throttle setting when shutting down the engine and turn off the fuel at the engine after completing the venting process.

6.5 Procedure in case of unexpected shutdown

Release the control lever.

Turn the engine ON/OFF switch on the handlebar to the OFF (O) position (Fig. 5A or 5C).

Make sure that the tines have stopped before moving the machine.

6.6 Residual risks of the Easy-Core 4 lawn aerator

The Easy-Core 4 lawn aerator is designed to be pushed by the operator during transport, and although it is self-propelled during operation, it does not have a drive axle. It does not have a braking system, so the operator must hold on tightly to the machine at all times when the machine is on sloping areas.

7.0 Maintenance



IMPORTANT! BEFORE PERFORMING ANY MAINTENANCE, MAKE SURE THE ENGINE IS TURNED OFF AND THE FUEL TAP IS CLOSED. DISCONNECT THE SPARK PLUG CAP

7.1 Schedule

	Operation	Daily	Weekly	Monthly
Engine	Check the engine oil level SAE 10W/30 API SJ or equivalent – see separate engine manual	X	X	
Machine	Check the tightness of tines or corers	X		
	Check condition of tines or destoners	X		
	Check condition of tines/core rods		X	
	Check the condition of the chain			X
	Check the control lever and cable		X	
	Check the condition of the protective cover			X
	Check bearings			X
	Check that all screws and nuts are tightened securely			X
	Check transmission oil	X	X	

7.2 Basic maintenance

Check that all protective devices are securely mounted.

Ensure that the cable connecting the control lever to the motor is securely attached at both ends and shows no signs of wear.

Ensure that the ON/OFF switch and cable on the handlebar are not damaged or defective.

Check the condition of the tires and make sure they do not have any indentations or significant wear.

Ensure that the wheels are securely held in place and that the bolt securing the wheels to the axles is in place.


7.3 Transmission



Important! Before checking the transmission oil level, the Easy-Core 4 lawn aerator must be tilted backwards to ensure that the transmission is level.

The front wheels should be raised approximately 1.6 inches above the ground


(Fig. 8). You can place a spirit level on the gearbox to ensure that it is horizontal.

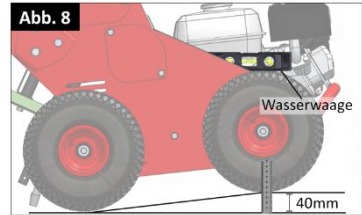

7.3.1 Checking the transmission oil level


It is recommended that the gearbox oil be changed every 12 months.

Open the drain plug (Fig. 9) on the gearbox and the filler plug and drain the oil into a suitable container or use a suction pump to remove the oil through the filler neck.

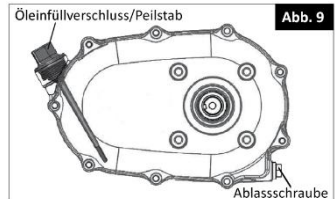

Remove the dipstick (Fig. 9) and fill the gearbox with approx. 0.3 l of SAE 10W-30 engine oil or equivalent.

Insert the dipstick and remove it without screwing it into the filler opening, and check the oil level to ensure that it is between the upper and lower limits (Fig. 10).

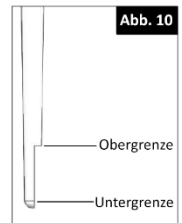

7.4 Engine

7.4.1 Checking the engine oil level

This must be checked before each use and every 8 hours during operation.

Only check when the engine is switched off and level.

Clean the oil filler plug and surrounding parts.

Remove the oil filler plug. Clean the dipstick with a clean cloth and insert the oil filler plug fully into the engine. Remove the oil filler plug and check the oil level.

Top up the oil if the indicator shows that more is required. The recommended oil for the Honda GX160 is: SAE 10W/30 API SJ or equivalent.

7.4.2 Changing the engine oil

Refer to the engine manufacturer's manual for information on locating components and more detailed assistance.

Do not change the oil when the engine is hot.

The first oil change should be performed after 20 hours of operation or one month, whichever comes first.

Subsequent oil changes should be performed after every 100 hours of operation or six months, whichever comes first.

In extreme temperatures or conditions, change the oil every 50 hours or three months, whichever comes first.

Open the drain plug on the engine and the filler plug and drain the oil into a suitable container or use a suction pump to remove the oil through the filler neck.

Ensure that the used oil is disposed of properly.

Replace the drain plug and tighten it.

Pour fresh engine oil through the oil filler opening. Use a funnel or similar device to make filling easier.

Replace the oil filler plug and tighten it.

7.4.3 Air filter

Inspection:

Remove the air filter cover and check the filter elements.

Cleaning:


See diagram with information provided by Honda.

Reinigung

Typen mit Doppel-Filtereinsatz

1. Die Flügelmutter vom Luftfilterdeckel abschrauben und den Deckel abnehmen.
2. Die Flügelmutter vom Luftfilter abschrauben, und den Filter abnehmen.
3. Den Schaumfiltereinsatz vom Papierfiltereinsatz abnehmen.
4. Beide Luftfiltereinsätze überprüfen und bei Beschädigung auswechseln. Der Papierluftfiltereinsatz ist stets in den planmäßigen Intervallen auszuwechseln.

STANDARDAUSFÜHRUNG MIT DOPPEL-FILTEREINSATZ

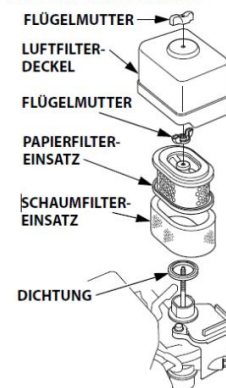

7.4.4 Spark plug

Clean and replace.

7.5 Cleaning

After cleaning, especially if a high-pressure cleaner has been used, ensure that all lubrication points are relubricated.

Clean the engine with a cloth only. Avoid spraying the engine with water jets, as this can get into the fuel and ignition systems.

7.6 Troubleshooting

7.6.1 Machine

Have any serious malfunctions on the machine or Honda engine repaired by an authorized Redexim or Honda representative.

Problem	Possible cause	Remedy
No drive to the tines.	Broken chain.	Replace chain.
Poor depth and poor drive.	The operator pushes the machine.	Pull back on the handlebar during operation to ensure that the tines are held vertically.

7.6.2 Engine

Problem	Possible cause	Remedy
Engine does not start.	Spark plug connector not connected.	Connect spark plug connector.
	Choke lever is not being operated.	Operate choke lever.
	Fuel tank is empty.	Fill fuel tank.
	Fuel line clogged.	Clean fuel line.
	Defective spark plug.	Clean or replace spark plug.
	The engine has too much fuel.	Dry and adjust spark plug and start engine at full throttle.
Engine overheats.	Low engine oil level.	Top up immediately.
	Impaired cooling.	Clean the fan grille.
	Air filter clogged.	Clean air filter.

7.6.3 Lubricant

Use SAE 10W/30 API SJ engine oil or equivalent, as specified by Honda.

8.0 Transport, storage, and handling

8.1 Transport

If possible, use ramps to maneuver the Easy-Core 4 lawn aerator into a transport vehicle.

The Easy-Core 4 lawn aerator must be securely fastened with straps and by placing wheel chocks behind the wheels.

Always transport the Easy-Core 4 lawn aerator horizontally and not tilted at an angle.

Ensure that the fuel control lever on the engine is set to the OFF position so that no fuel enters the carburetor during transport.

8.2 Storage

Always allow the engine to cool down before storing.

Always clean and dry the machine thoroughly before storage and ensure that all lubrication points are re-lubricated.

Change the engine oil for prolonged storage.

Either drain the fuel completely or fill the fuel tank and add fuel stabilizer.

Do not store the aerator in damp rooms where fertilizer is stored or in stables, as this can lead to severe corrosion.

Always store the machine in a horizontal position.

8.3 Handling

Do not attempt to lift the machine alone. At least 5 people are required.

Gloves must be worn when lifting the Easy-Core 4 lawn aerator.

Do not tilt the machine in such a way that fuel can enter the engine's air filter.

When performing maintenance on the aerator while the machine is on a workbench, ensure that the machine is held firmly in place at all times.

Never lift the machine by the engine alone.

9.0 Service certificate

To ensure that your equipment remains in perfect condition, we recommend that you service your Redexim Easy-Core 4 lawn aerator at regular intervals.

Contact Redexim to find out who your authorized local representative is, or visit www.redexim.com.

Company:	Company:
Date:	Date:
Company stamp (or address & authorized signature):	Company stamp (or address & authorized signature):
Company:	Company:
Date:	Date:
Company stamp (or address & authorized signature):	Company stamp (or address & authorized signature):
Company:	Company:
Date:	Date:
Company stamp (or address & authorized signature):	Company stamp (or address & authorized signature):

10.0 EC Declaration of Conformity



Tracmaster Ltd declares that the machines listed below comply with all relevant provisions:

Machinery Directive 2006/42/EC

EMC Directive 2004/108/EC

and the national laws, regulations, and administrative provisions implementing these directives and other relevant directives.

Manufacturer: Tracmaster Ltd
Units 6-7 Winterpick Business Park
Hurstpierpoint Road
Wineham
Henfield
BN5 9BJ
UNITED KINGDOM

Description of the machine: Lawn aerator

Type Redexim Easy-Core 4

Applied harmonized standards: (including parts of):

EN 13684:2018	Garden equipment. Pedestrian-controlled lawn aerators and scarifiers.
EN 294:1992	Safety of machinery: Safety distance to prevent upper limbs from reaching danger zones.
EN 954-1:1996	Safety of machinery: Safety-related parts of control systems. Part 1 – General principles for design.
EN 20643:2008+A1:2012	Hand-arm vibration: Laboratory measurement of vibrations at the grip surface of hand-held machines – general.
EN 12100-1:2003 & EN12100-2:2003	Safety of machinery: Basic concepts, general principles for design parts 1 & 2.
ISO 11684:1995	Tractors, agricultural and forestry machinery, motorized lawn and garden equipment: Safety signs and hazard symbols – general principles.

Responsible Person: Jody Symons

Position in Company: Technical Director

Address: Tracmaster Ltd, Units 6-7 Winterpick Business Park, Hurstpierpoint Road, Wineham, Henfield, BN5 9BJ, UK

Date: May 2021

Signature:

...

11.0 Warranty information

The warranty applies to all parts of the machine, with the exception of the Honda engine, which, in the opinion of the manufacturer, has manufacturing or assembly defects.

The warranty applies to the original purchaser of the machine from the date of sale for the warranty period. The warranty is non-transferable.

The warranty period begins on the day the machine is delivered to the customer and applies for the following periods:

For domestic or private use: 3 years

For commercial or rental use: 2 years

The manufacturer is obliged to replace or repair the defective material free of charge at its own discretion, provided that the machine is returned to its workshops or those of an authorized representative.

If the owner of the machine wishes to install the parts themselves, the labor costs shall be borne by them and shall not be reimbursed. Costs resulting from a subsequent failure of a part due to improper installation by the owner of the machine shall be borne by the owner of the machine.

The warranty does not cover transportation costs or direct or indirect losses resulting from loss of use of the machine due to manufacturing defects or mechanical failure.

- No warranty will be recognized in the following cases:
- The fault is caused by failure to comply with the manufacturer's instructions for the correct use and operation of the machine.
- Seals and settings have been tampered with.
- The repair or modification was not approved by the manufacturer.
- Routine maintenance, as recommended in this manual, has not been performed.
- Incorrect fuels or lubricants were used.
- Wear and tear on consumables such as tines, cores, belts, cables, tires, etc.
- Normal wear and tear.
- The failure is due to misuse/abuse/neglect.

If you have any problems with the Honda engine, please contact an authorized Honda service center. The Honda engine is covered by the warranty in accordance with the practices established by the respective manufacturer and/or dealer.

If a problem occurs with the machine within the warranty period, the problem must be checked by the manufacturer or an authorized representative before any repairs are carried out.

Any other express or implied warranty is hereby disclaimed and replaced by this warranty, the terms of which may only be modified in writing.

This warranty grants certain legal rights and applies in addition to all legal rights. Your legal rights are not affected by this warranty.

If you have any questions about this warranty information, please contact Redexim.



Redexim Easy-Core 4 Petrol Lawn Aerator
Original operating instructions
Rev. 07/2025.A

© 2025 Tracmaster Ltd

Tracmaster Ltd

Units 6-7 Winterpick Business Park | Hurstpierpoint Road | Wineham | Henfield | BN5 9BJ | UK
Tel: +44 (0)1444 247689 | www.tracmaster.co.uk | info@tracmaster.co.uk