
Parts manual

RINK – Topdresser

Model GS1210

Applies to:
A133.121.000 RINK - Topdresser 1210

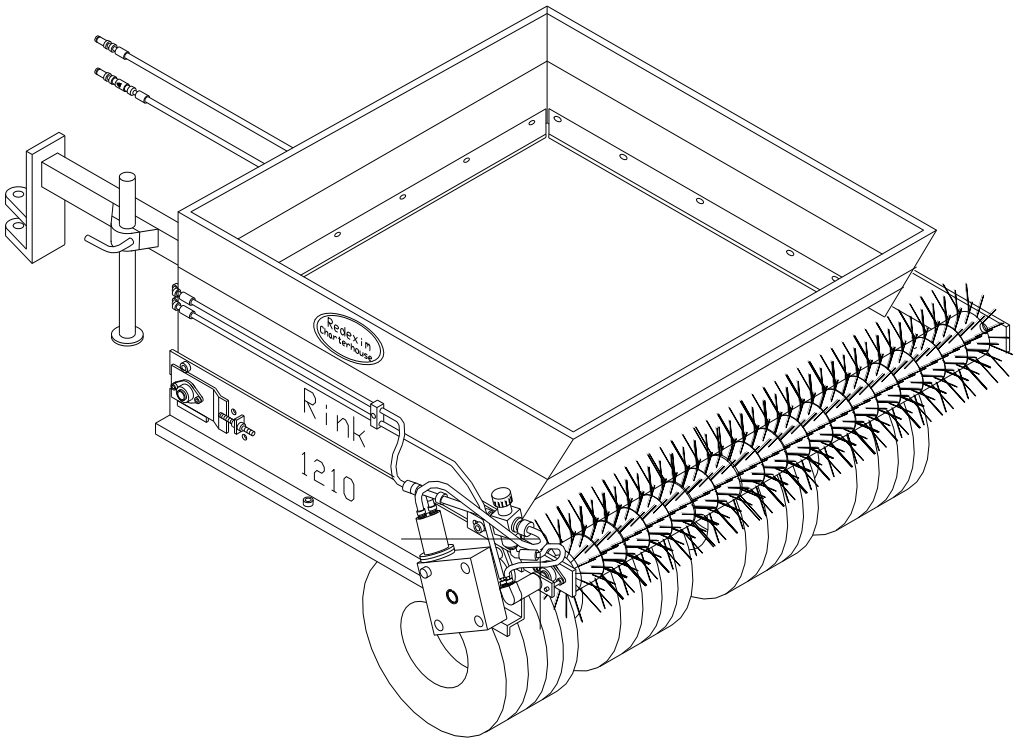

RINK Spezialmaschinen GmbH, D-88279 Amtzell
Phone 07520/95690 **Fax 07520/956940**
www.rink-spezial.de **info@rink-spezial.de**

SPARE PARTS

RINK Topdresser GS1210

Address for ordering spare parts


Rink Spezialmaschinen GmbH
Alfons-Stübe-Weg 4
D-88279 Amtzell

Phone: (07520) 95690
Fax: (07520) 95690
Email: info@rink-spezial.de

Spare parts order

To ensure that your spare parts order can be processed quickly, please include the following information with every order:

- Chassis or identification number
- Year of manufacture (if available)
- Part number from the relevant spare parts list
- Description
- Order no.

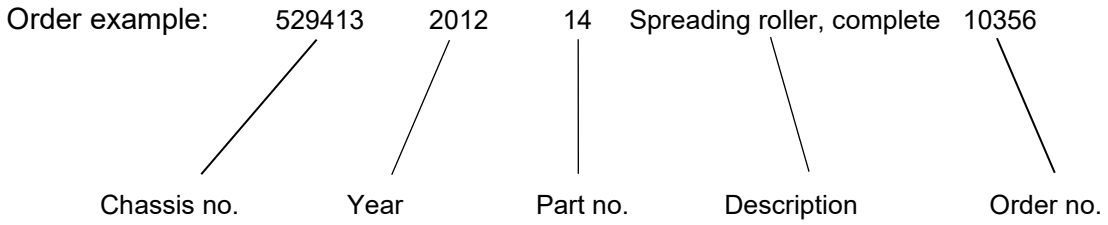

RINK Topdresser GS1210 complete (16219)

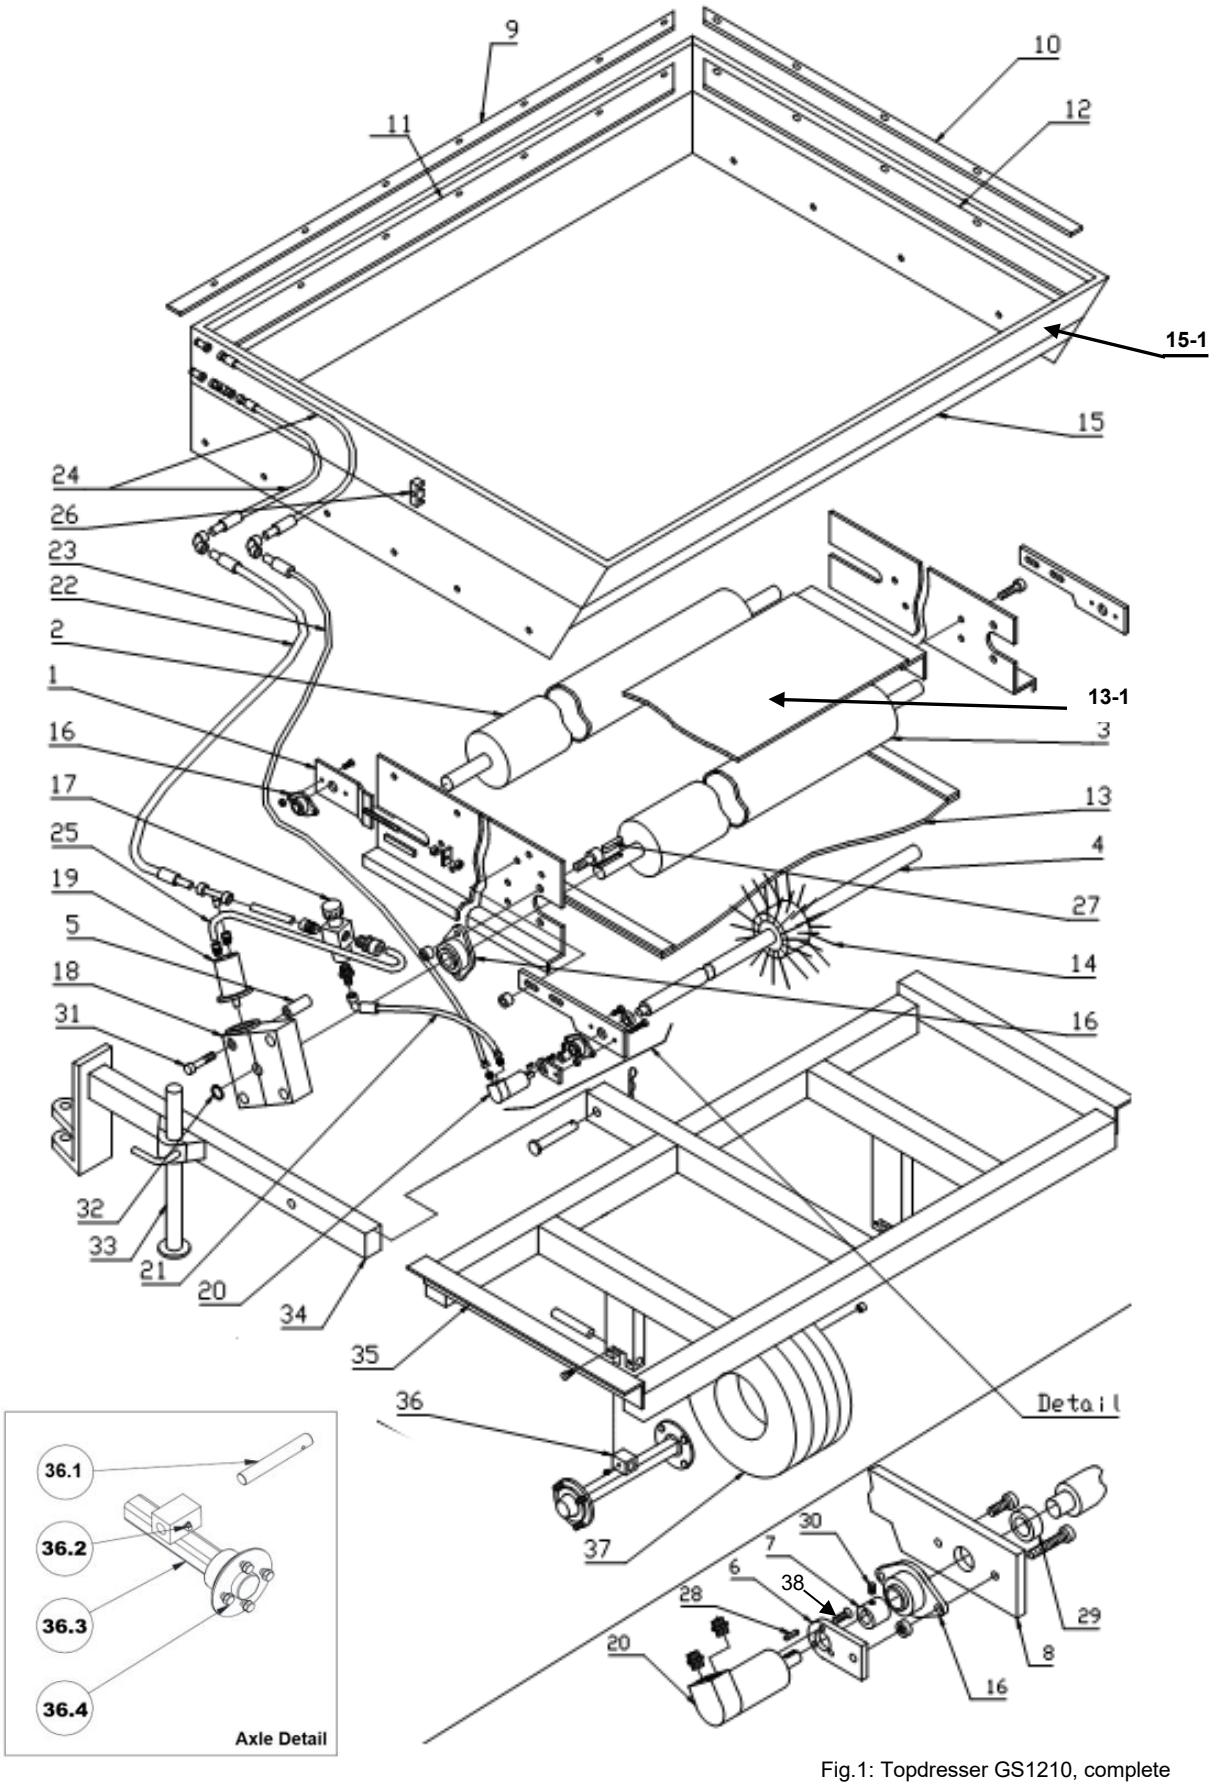


Fig.1: Topdresser GS1210, complete

Spare parts list RINK Topdresser GS1210, complete

Part	Order no.	Description	Comment	Quantity
1	RGS 16112	Clamping device		2
2	RGS 16216	Front transport roller		1
3	RGS 16214	Rear transport roller	Rubber-coated	1
4	RGS 17955	Brush shaft Ø35mm complete with connecting sleeve	For connecting sleeve separately, See item 7 (sold separately)	1
5	RGS 16161	Torque support Belt drive		1
6	RGS 16157	Torque support Brush		1
7	RGS 16160	Connecting sleeve		1
8	RGS 16115	Brush roller holder		1
9	RGS 18020	Aluminium strip, front funnel	From item 15	
10	RGS 18021	Aluminium strip, funnel, side	From item 15	
11	RGS 10709	Front rubber scraper		1
12	RGS 10708	Side scraper rubber		2
13	RGS 10698	Conveyor belt		1
13-1	RGS 16142	Floor support, complete	Sheet metal base only 16141	1
14	RGS 10356	Spreading roller, complete		1
15	RGS 10699	Aluminium hopper complete	Aluminium	1
15-1	RGS 18022	Front wall aluminium funnel	From item 15	
16	RGS 11001	Flange bearing 30 mm	See maintenance instructions	6
17	RGS 10335	Flow regulator 12 l		1
18	RGS 10492	Belt roller gearbox	See maintenance instructions	1
18-1	RGS 5037	Gearbox vent screw	From item 18	
19	RGS 10705	Hydraulic motor for belt roller		1
20	RGS 10656	Hydraulic motor brush roller		1
21	RGS 10673	Hydraulic hose NW 10x280		1
22	RGS 10675	Hydraulic hose NW 10x1200		1
23	RGS 10674	Hydraulic hose NW 10x1500		1
24	RGS 10667	Hydraulic hose NW 10x2800		1
25	RGS 10444	Pipe elbow	Pipe 12x1 mm	1
26	RGS 10348	Hose clamp		
27	RGS 10100	Key 8x7x20		
28	RGS 10483	Key 5x5x16		
29	RGS 10605	Clamping sleeve 8x30		
30	RGS 10430	Threaded pin M 8x6		
31	RGS 10600	Screw M 10x100		
32	RGS 11002	Retaining ring 30x1.5		
33	RGS 10023	Support foot		
34	RGS 16150	Drawbar		
35	RGS 16220	Chassis		
36		Axle detail		
36.1	RGS 16137	Bolt		
36.2	RGS 10628	Grease nipple M8 H3		
36.3	RGS 16138	Running axle 360 mm track width		
36.4	RGS 10697	Wheel bolt M12x1.5		
37	RGS 10525	Complete wheel		
38	RGS 10482	Countersunk screw M6x16		3

External oil supply (16251)

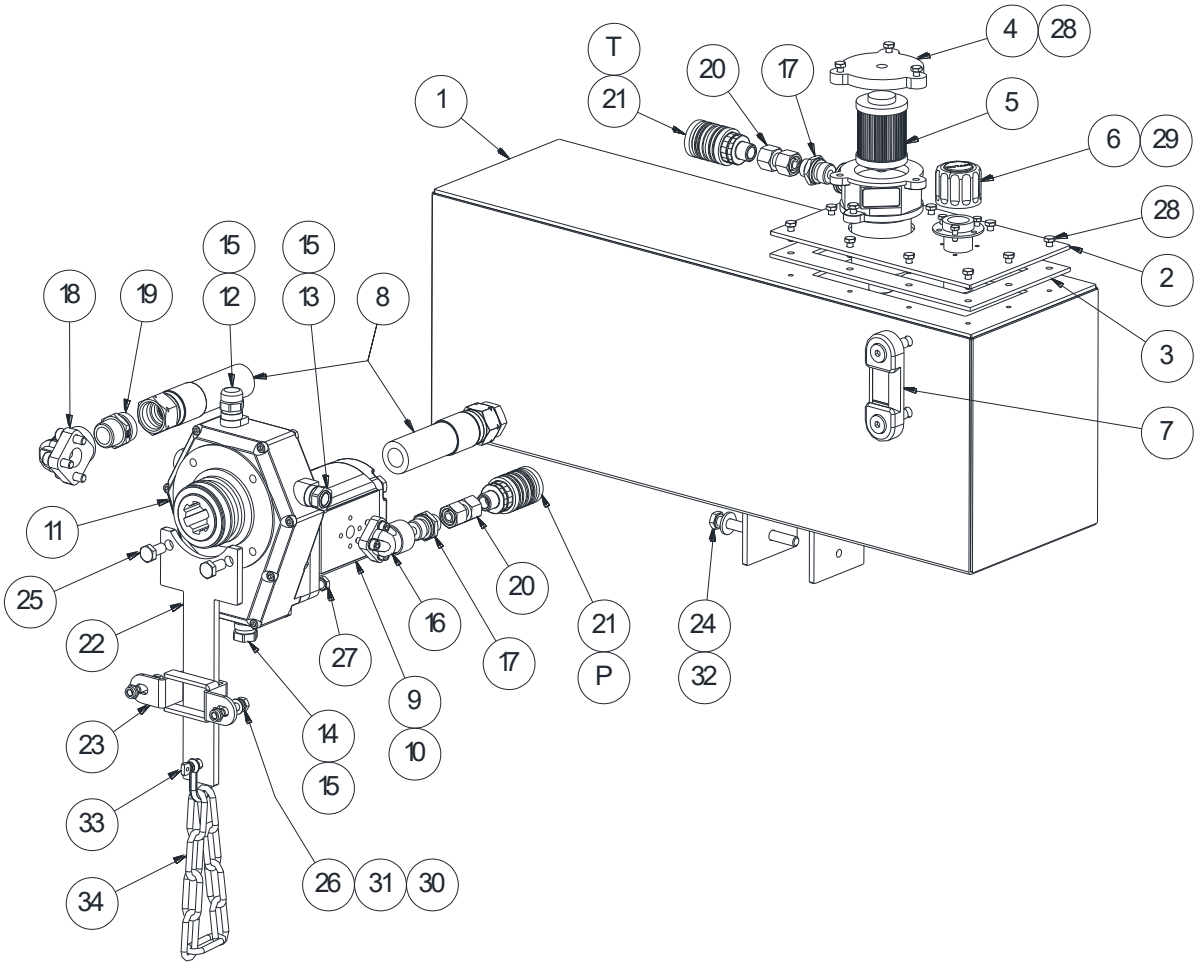


Fig. 2: External oil supply

Spare parts list, List for external oil supply

Part	Order number	Description	Comment	Quantity
1	RGS 16077	Tank		1
2	RGS 16059	Screw cap		1
3	RGS 11198	Tank cap seal		1
4	RGS 10841	Return filter		1
5	RGS 10722	Filter insert		1
6	RGS 10840	Filling and ventilation filter		1
7	RGS 10842	Oil level indicator		1
8	RGS 5018	Suction hose		1
9	RGS 5025	Pump		1
10	RGS 5026	Coupling sleeve and wedge		1
11	RGS 5020	Gearbox		1
12	RGS 10859	Vent screw		1
13	RGS 10858	Sight glass		1
14	RGS 10780	Drain plug		1
15	RGS 10779	Seal		3
16	RGS 5004	Pump flange		1
17	RGS 10662	Screw-in fitting		2
18	RGS 5021	Pump flange		1
19	RGS 5022	Screw-in fitting		1
20	RGS 10040	Straight connection		2
21	RGS 10744	HD socket		2
22	RGS 10390	Pump holder		1
23	RGS 11023	Pocket		1
24	RGS 10600	Hexagon screw M10x100		1
25	RGS 10148	Hexagon screw M10x20		2
26	RGS 10636	Hexagon screw M8x30		2
27	RGS 10146	Hexagon screw M8x20		4
28	RGS 10159	Hexagon screw M6x16		12
29	RGS 10147	Hexagon screw M5x12		3
30	RGS 10759	Hex nut M8		2
31	RGS 10550	Washer		2
32	RGS 10054	Clamping disc		1
33	RGS 11021	Shackle M8		1
34	RGS 10484	Chain		1