

Seeding Table



MULTI-SEEDER 1200-1600-2100



Version: 2239



Kwekerijweg 8 | 3709JA | Zeist | The Netherlands |
T: +31 (0)306 933 227
E: redexim@redexim.com
W: www.redexim.com

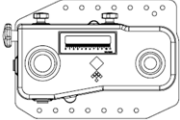
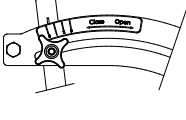
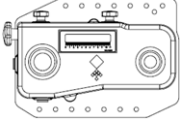
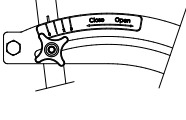
The seeding tables described in this document are an indication of the amount that the machine can sow at the given grass types and machine settings.

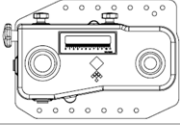

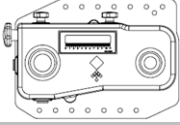

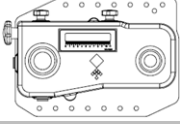

The data was obtained by performing a calibration test under factory conditions.

The result may therefore differ slightly from your machine due to other circumstances such as, for example, differences in seed mixture, climate conditions, wear of the components of the machine, etc.

It is therefore advisable to do a calibration test before starting so that you know what the output of the machine is under the prevailing conditions.

This calibration test is described in the user manual of the machine.

Seeding table Multi-Seeder 1200-1600-2100					
Gearbox setting	Gate opening	Rye grass			
		g/m²	Kg/ha	Pound / 1000 ft²	Pound / Acre
0.5	0	0.4	3.9	0.1	3.5
1	0	0.9	9.4	0.2	8.4
1.5	0	2.1	21.0	0.4	18.7
2	0	4.1	40.9	0.8	36.5
3	0	6.7	67.3	1.4	60.0
4	0	9.6	96.4	2.0	86.0
5	0	13.0	130.4	2.7	116.4
6	0	16.6	166.3	3.4	148.4
7	0	20.7	207.3	4.2	184.9
8	0	26.0	259.5	5.3	231.6
9	0	31.5	314.7	6.4	280.8
10	0	37.8	377.6	7.7	336.9
11	0	47.7	476.6	9.8	425.2
Gearbox setting	Gate opening	Blue grass			
		g/m²	Kg/ha	Pound / 1000 ft²	Pound / Acre
0.5	0	1.1	10.9	0.2	9.7
1	0	2.2	21.7	0.4	19.3
1.5	0	4.8	48.5	1.0	43.3
2	0	7.5	74.9	1.5	66.8
3	0	12.3	123.4	2.5	110.1
4	0	17.7	176.8	3.6	157.7
5	0	23.9	239.1	4.9	213.3
6	0	30.5	304.9	6.2	272.0
7	0	38.0	380.0	7.8	339.0
8	0	47.6	475.8	9.7	424.5
9	0	57.7	576.9	11.8	514.7
10	0	69.2	692.3	14.2	617.7
11	0	87.4	873.7	17.9	779.5

Seeding table Multi-Seeder 1200-1600-2100					
Gearbox setting	Gate opening	Red Fescue grass			
		g/m²	Kg/ha	Pound / 1000 ft²	Pound / Acre
0.5	0	0.5	5.5	0.1	4.9
1	0	1.1	10.8	0.2	9.7
1.5	0	2.4	24.3	0.5	21.6
2	0	3.7	37.5	0.8	33.4
3	0	6.2	61.7	1.3	55.1
4	0	8.8	88.5	1.8	78.9
5	0	12.0	119.6	2.5	106.7
6	0	15.3	152.5	3.1	136.1
7	0	19.0	190.1	3.9	169.6
8	0	23.8	238.1	4.9	212.4
9	0	28.9	288.7	5.9	257.6
10	0	34.6	346.4	7.1	309.1
11	0	43.7	437.2	9.0	390.1
Gearbox setting	Gate opening	Bermuda grass			
		g/m²	Kg/ha	Pound / 1000 ft²	Pound / Acre
0.5	0	1.3	13.4	0.3	12.0
1	0	2.7	26.6	0.5	23.8
1.5	0	6.0	59.6	1.2	53.2
2	0	9.2	92.1	1.9	82.1
3	0	15.2	151.6	3.1	135.3
4	0	21.7	217.3	4.5	193.9
5	0	29.4	293.9	6.0	262.2
6	0	37.5	374.7	7.7	334.3
7	0	46.7	467.0	9.6	416.7
8	0	58.5	584.8	12.0	521.8
9	0	70.9	709.1	14.5	632.7
10	0	85.1	850.9	17.4	759.2
11	0	107.4	1073.9	22.0	958.1
Gearbox setting	Gate opening	Bent grass			
		g/m²	Kg/ha	Pound / 1000 ft²	Pound / Acre
0.5	0	0.9	8.8	0.2	7.9
1	0	1.7	17.5	0.4	15.6
1.5	0	3.9	39.1	0.8	34.9
2	0	6.0	60.5	1.2	53.9
3	0	10.0	99.6	2.0	88.8
4	0	14.3	142.7	2.9	127.3
5	0	19.3	193.0	4.0	172.2
6	0	24.6	246.1	5.0	219.6
7	0	30.7	306.7	6.3	273.7
8	0	38.4	384.1	7.9	342.7
9	0	46.6	465.7	9.5	415.5
10	0	55.9	558.9	11.4	498.6
11	0	70.5	705.4	14.4	629.3