
Parts manual

RINK - Topdresser
Model SP950

Applies to:
S0001591 RINK- Topdresser SP950

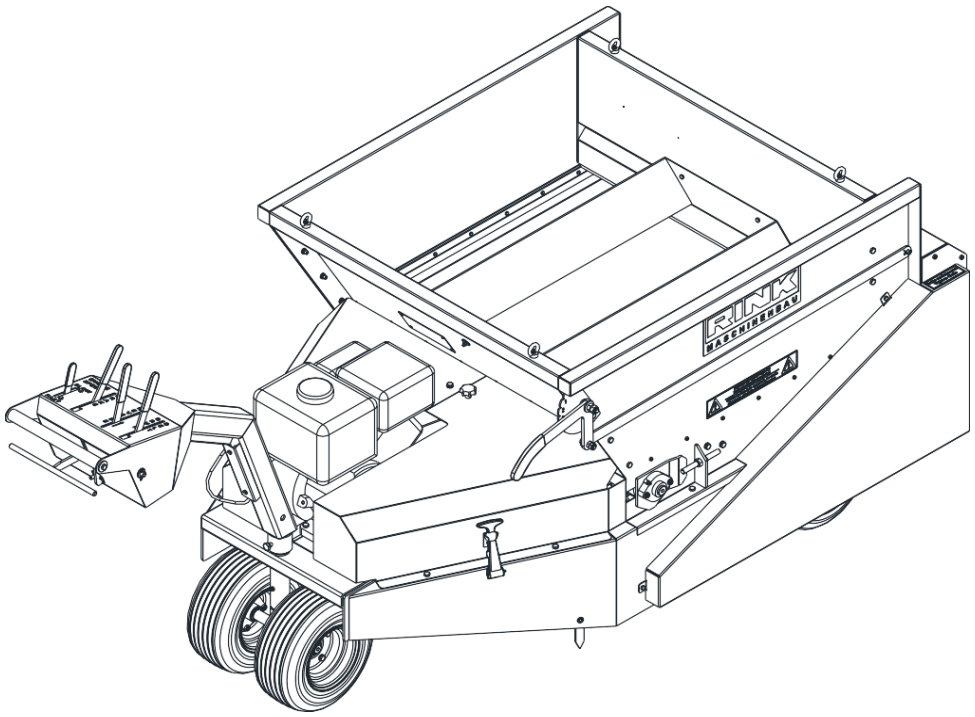

RINK Spezialmaschinen GmbH, D-88279 Amtzell
Phone:07520/95690 **Fax:07520/956940**
www.rink-spezial.de **info@rink-spezial.de**

SPARE PARTS

RINK Topdresser SP950 Address

for ordering spare parts


Rink Spezialmaschinen GmbH
Alfons-Stübe-Weg 4
D-88279 Amtzell

Phone (07520) 95690
Fax (07520) 956940
Email: info@rink-spezial.de

Spare Parts Order

To ensure your spare parts order is processed quickly, please be sure to include the following information with every order:

- Chassis or identification number
- Year of manufacture (if available)
- Part number from the relevant spare parts list
- Description
- Order number

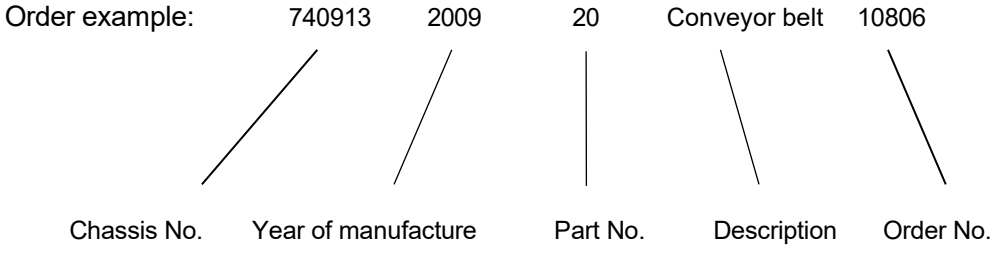

RINK SP950 Topdresser, Complete

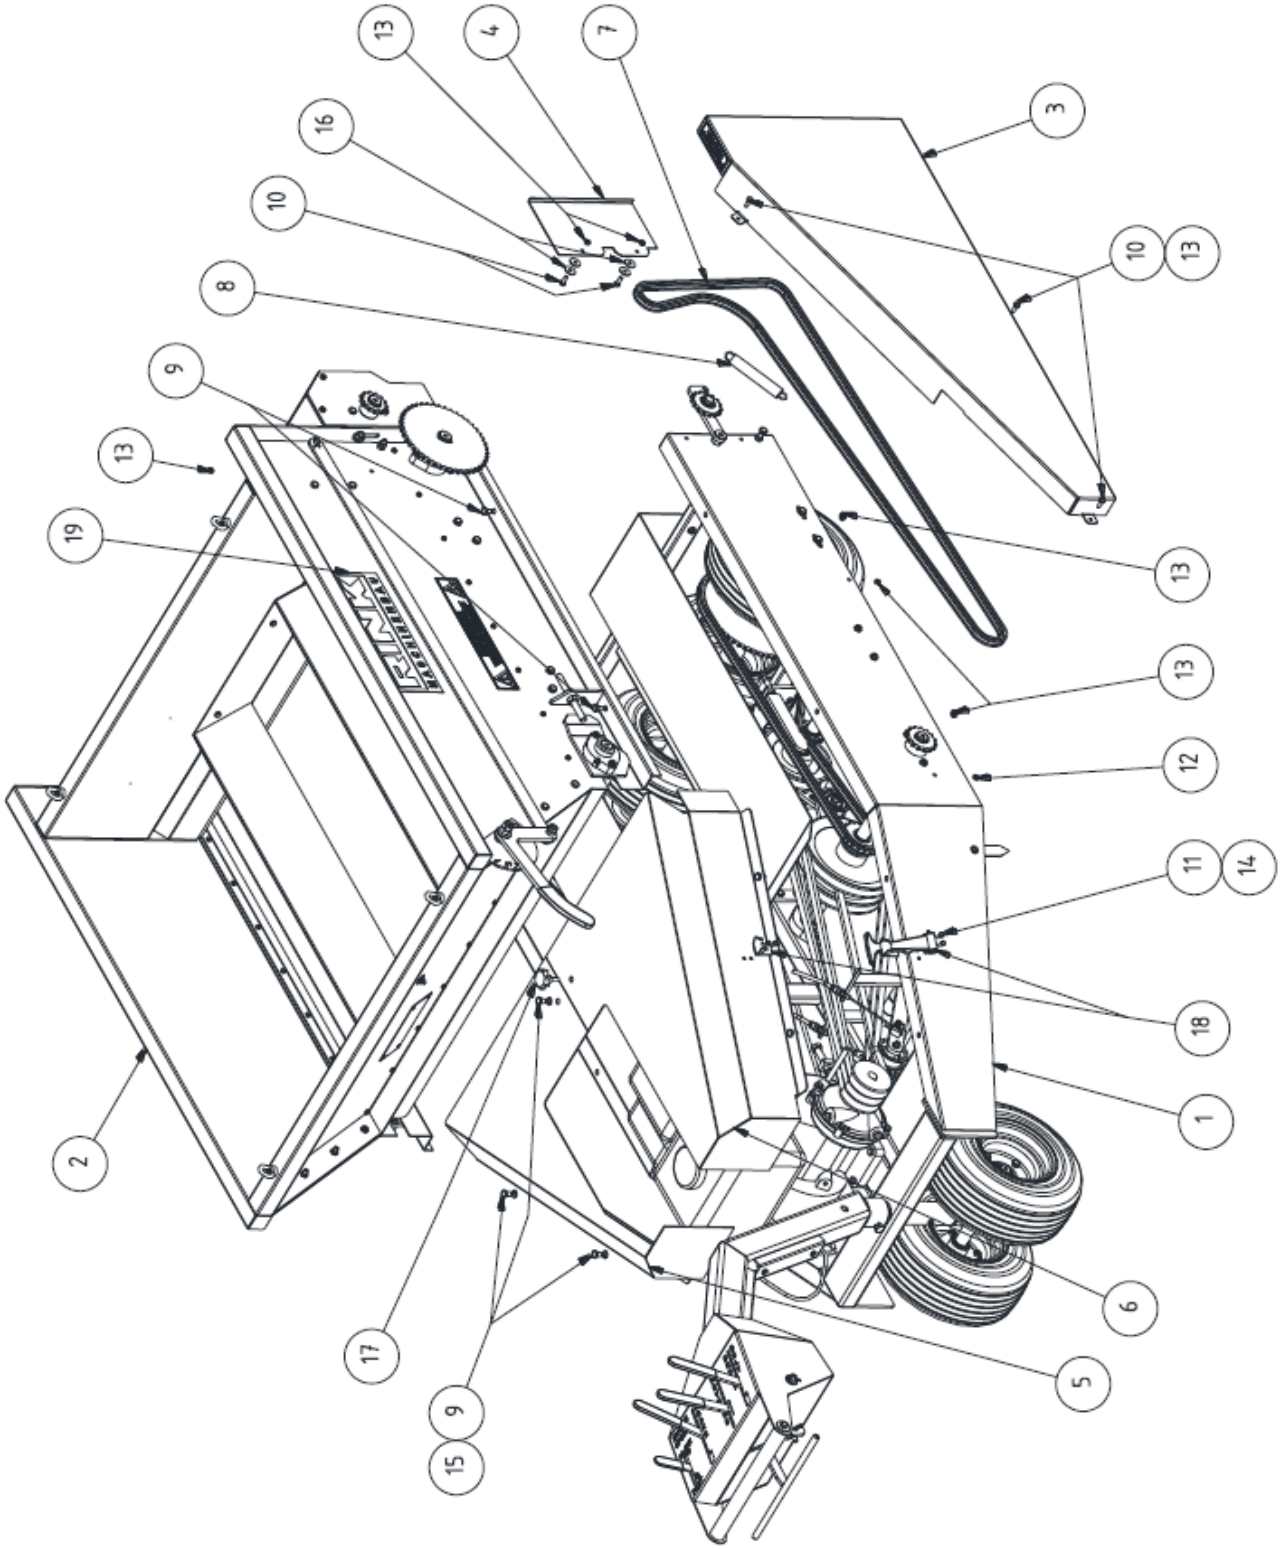


Fig. 1 RINK Topdresser SP950 complete

Spare Parts List for RINK Topdresser SP950 Complete

Part	Order number	Description	Remarks	Quantity
1	RGS 16710	Complete chassis		1
2	RGS 16700	Hopper, complete		1
3	RGS 11080	Chain guard		1
4	RGS 11081	Sheet metal for chain guard		1
5	RGS 16719	Complete left side guard		1
6	RGS 16718	Complete right protective cover		1
7	RGS 10822	Chain for spreader		1
8	RGS 11019	Tension spring		1
9	RGS 10150	Hex head screw M8x12		7
10	RGS 10159	Hexagon head screw M6x16		5
11	RGS 10147	Hexagon head screw M5x12		4
12	RGS 10759	Hex nut M8		4
13	RGS 10493	Hex nut M6		5
14	RGS 10184	Hex nut M5		4
15	RGS 10134	Spring washer A8		3
16	RGS 10194	Washer		4
17	RGS 11041	Star knob		1
18	RGS 10315	Large hood holder		1
19	RGS 11168	Box for instructions	included in No. 16475	1
20	RGS 10146	Hex head screw M8x30	Included in No. 16475	2
21	RGS 10107	Washer	Included in No. 16475	2
22	RGS 10193	Washer	included in No. 16475	2
23	RGS 16475	Sticker Set SP 950		1

Spare Parts List for Sticker Set 16475

	RGS 11173	Stickers for box (manual)	Included in Item 23	1
	RGS 10505	“Enter the loading dock” sticker	Included in Item 23	2
	RGS 10519	"Tighten Chain" sticker	Included in Item 23	2
	RGS 11132	Safety sticker	Included in item 23	2
	RGS 11131	RINK sticker	Included in Item 23	3
	RGS 11175	Redexim sticker	included in item 23	3
	RGS 11186	SP950 sticker	included in item 23	2
	RGS 11168	Box for instructions	included in item 23	1
	RGS 10146	Hexagon head screw M8x30	included in item 23	2
	RGS 10107	Disc	included in item 23	2
	RGS 10193	Washer	included in item 23	2

Complete chassis

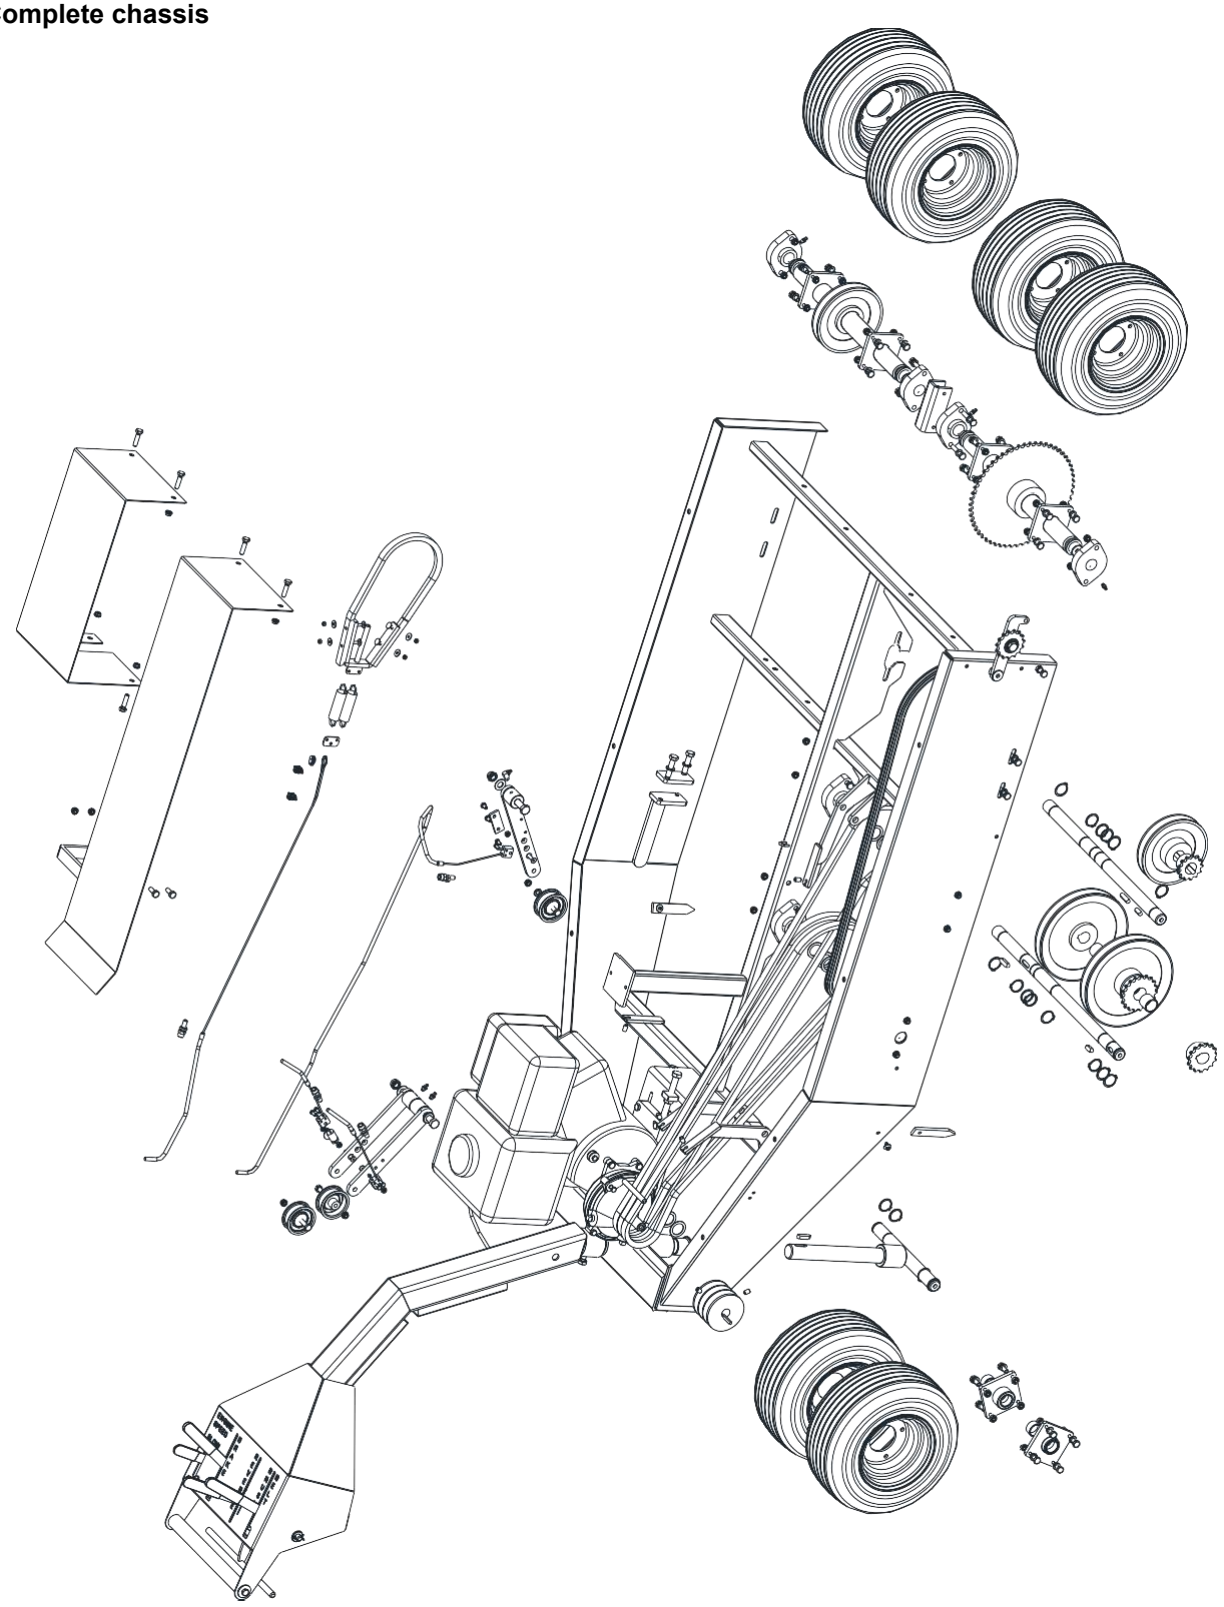


Fig. 2. Complete chassis

Complete chassis

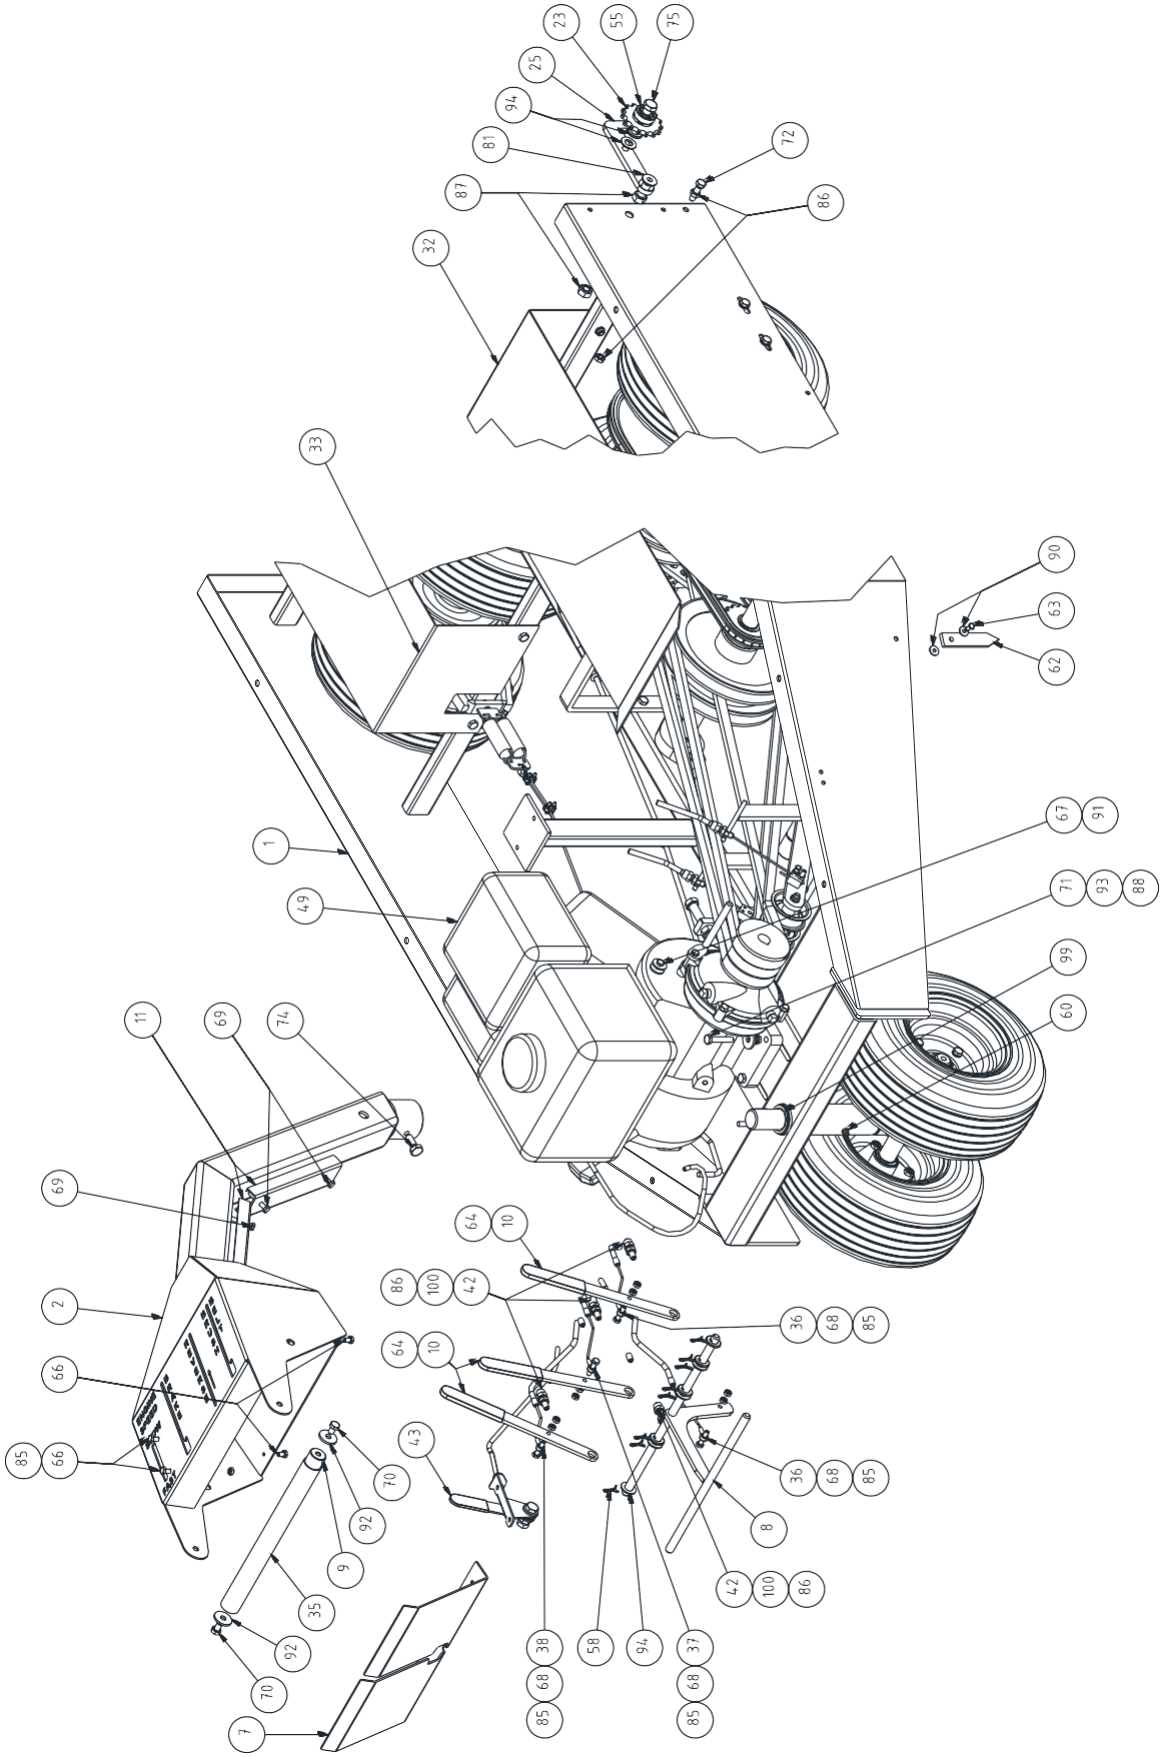


Fig. 3. Complete chassis

Complete chassis

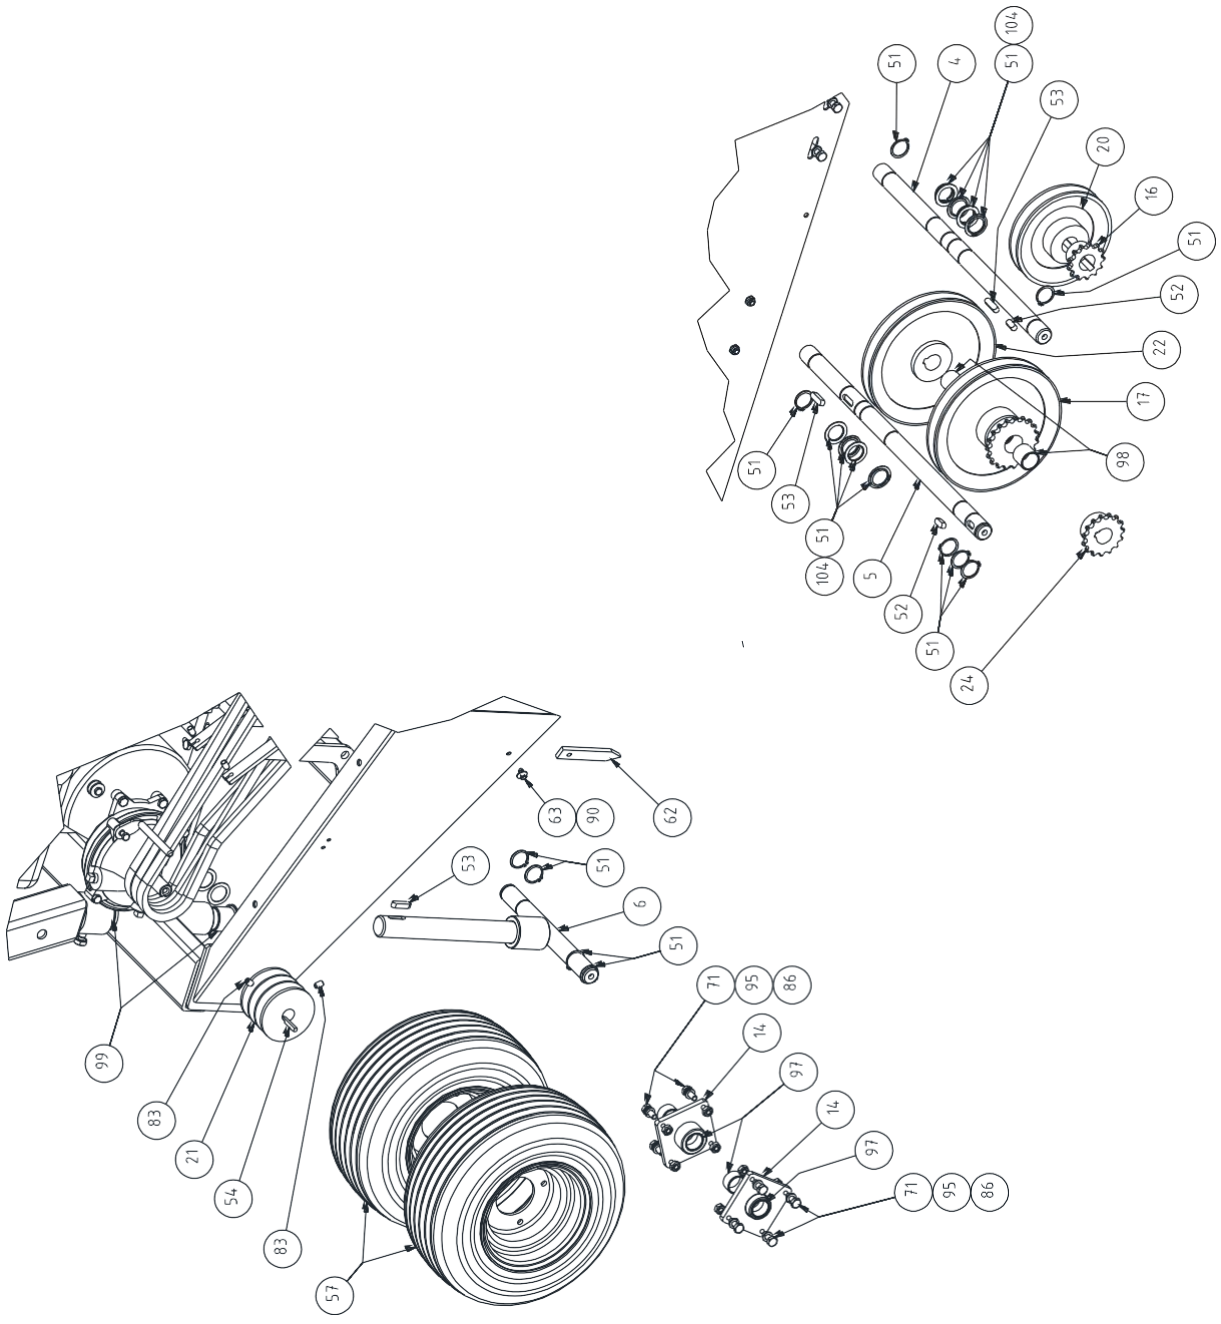


Fig. 4 Complete chassis

Complete chassis

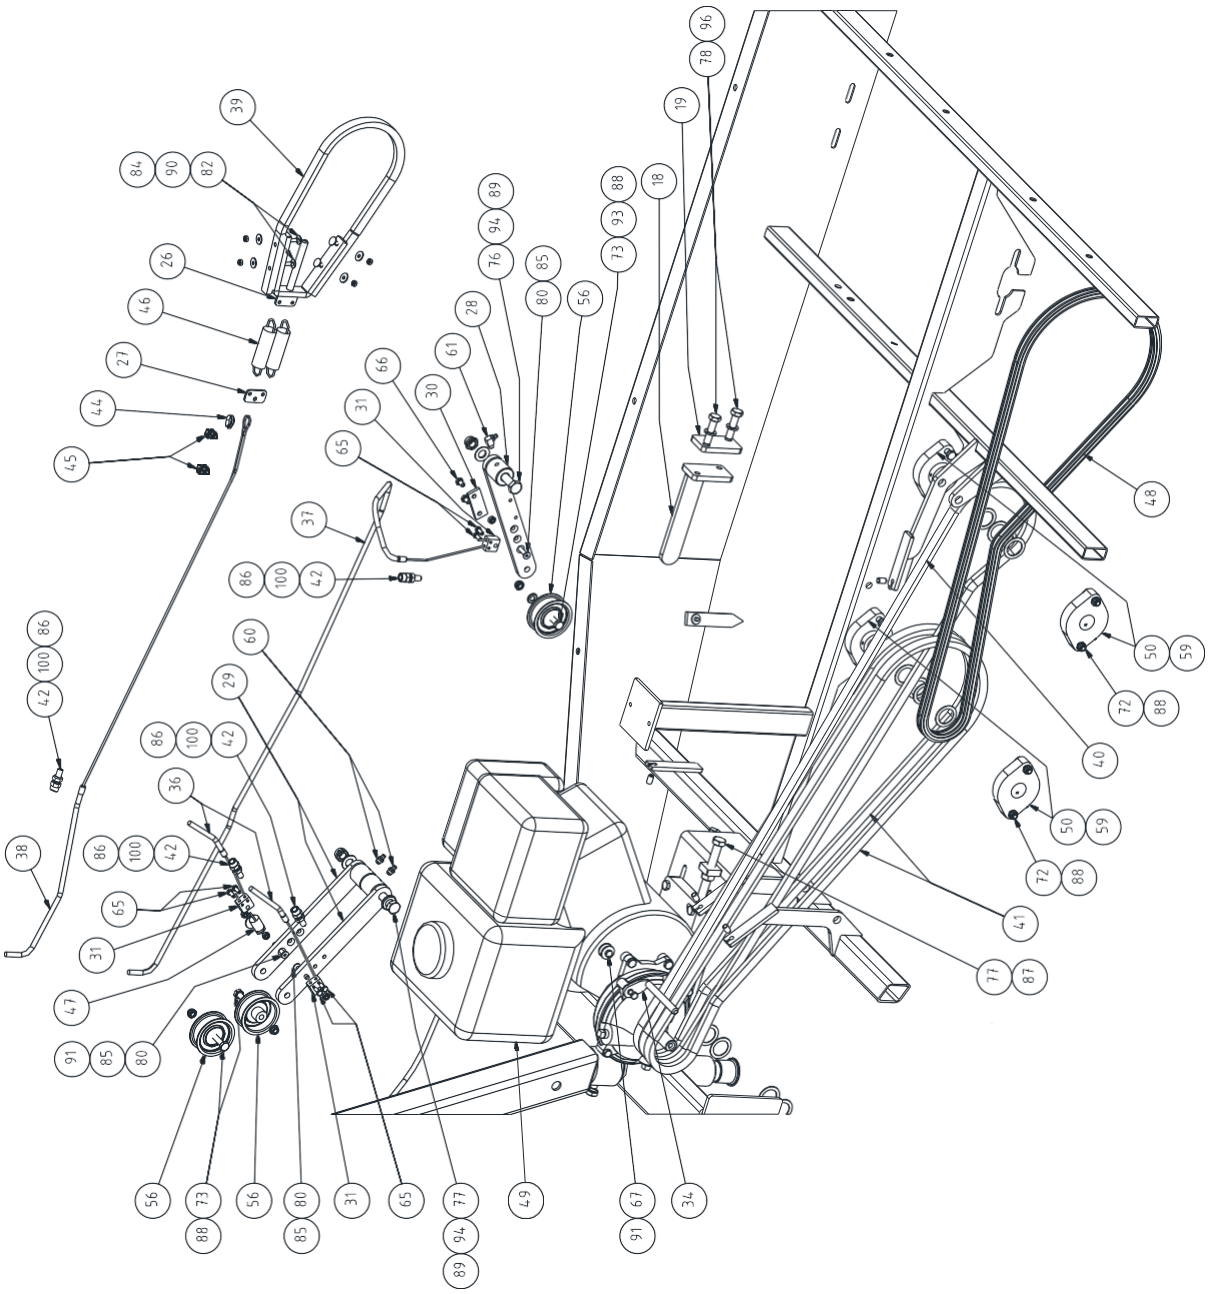


Fig. 5. Complete chassis

Complete chassis

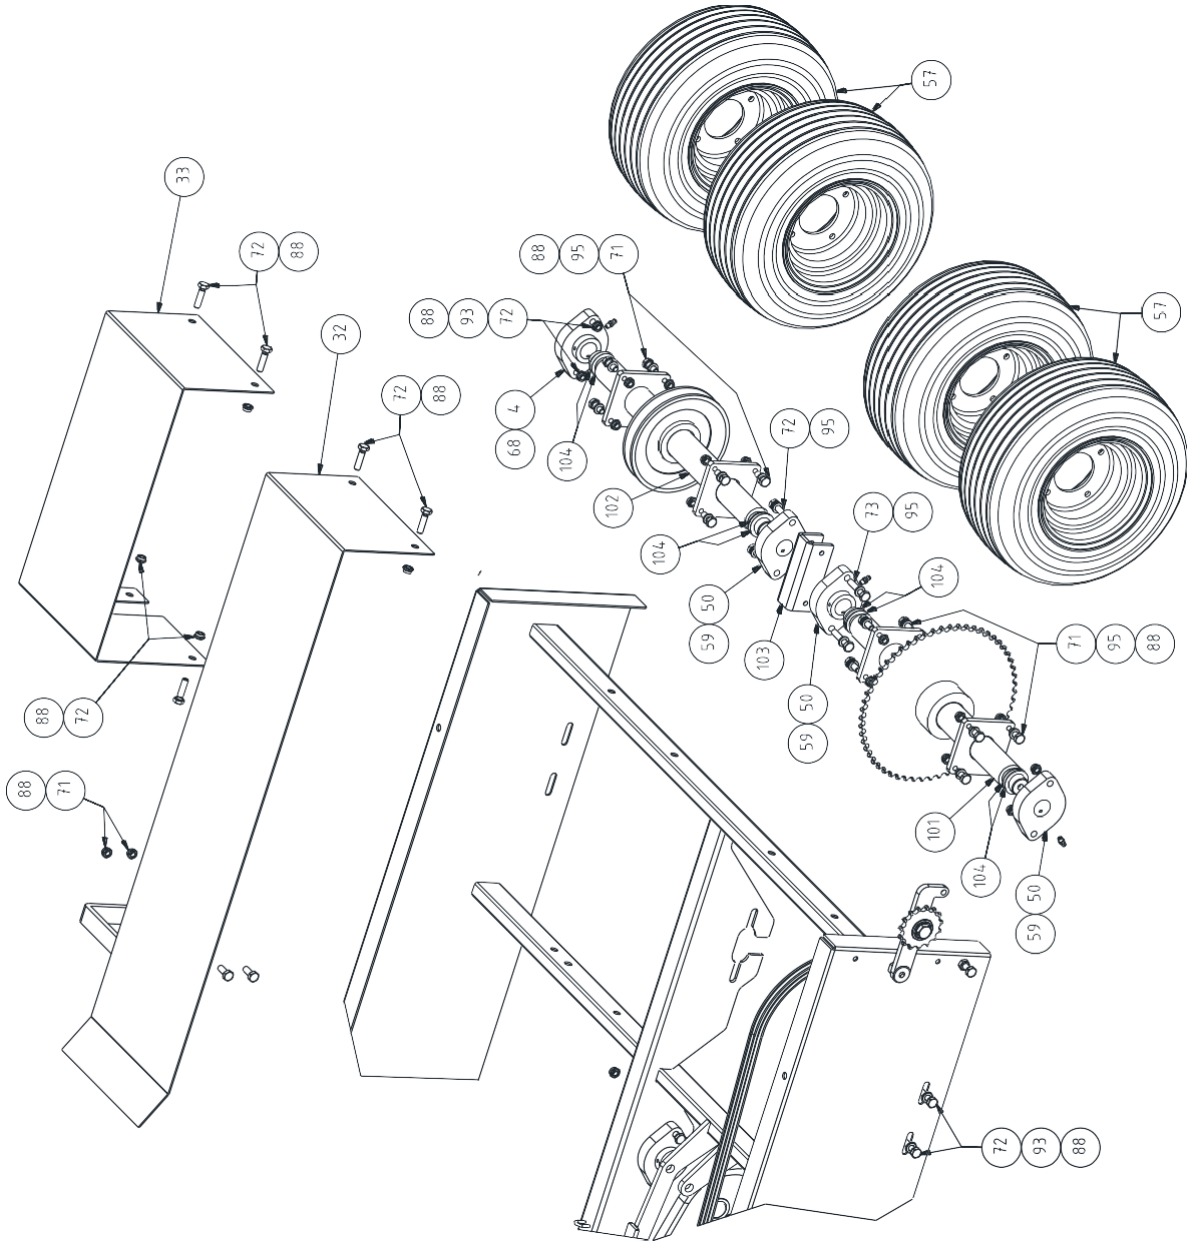


Fig. 6. Complete landing gear

Spare parts list: Complete landing gear

Part	Order number	Description	Remarks	Quantity
1	RGS 16699	Complete frame		1
2	RGS 16707	Control box, complete		1
4	RGS 16702	Shaft		1
5	RGS 16704	Shaft		1
6	RGS 16725	Front fork, complete		1
7	RGS 11089	Gearbox cover		1
8	RGS 16708	Shift lever, complete		1
9	RGS 16709	Handle		1
10	RGS 11088	Shift lever		3
11	RGS 11090	Cable channel		2
14	RGS 16729	Wheel hub for bushings	Bushing = Item 97	2
14.1	RGS 16743	Wheel hub complete with bushing		
16	RGS 15452	Chainring		1
17	RGS 16705	Double sprocket		1
18	RGS 16698	Chain retainer		1
19	RGS 11110	Perforated plate		1
20	RGS 16740	V-belt pulley		1
21	RGS 16741	V-belt pulley		1
22	RGS 16739	V-belt pulley		1
23	RGS 16742	Chain sprocket Z 15		1
24	RGS 10813	Sprocket Z 15		1
25	RGS 16706	Chain tensioning lever		1
26	RGS 16717	Complete brake angle		1
27	RGS 11107	Spring mounting		1
28	RGS 16715	Complete belt tensioner		1
29	RGS 16726	Complete belt tensioner		2
30	RGS 16745	Plastic strip		1
31	RGS 16824	Cable clamp		3
32	RGS 16716	Pulley cover		1
33	RGS 11098	Brake cover		1
34	RGS 16728	Belt guide		1
35	RGS 16833	Hose for handle		1
36	RGS 16848	Complete forward cable pull		2
37	RGS 16849	Complete reverse cable pull		1
38	RGS 16850	Brake cable assembly, complete		1
39	RGS 16834	V-belt for brake		1
40	RGS 10820	V-belt for reverse		1
41	RGS 10817	V-belt for spreader/forward		2
42	RGS 11126	Adjusting screw		8
43	RGS 11125	Complete throttle cable		1
44	RGS 10499	Cable thimble		1
45	RGS 10498	Rope clamp		2
46	RGS 11019	Tension spring		2
47	RGS 10608	Tension spring		1
48	RGS 10823	Chain for drive system		1
49	RGS 10691	Motor		1
50	RGS 10594	Bearing		8
51	RGS 11008	Retaining ring		18
52	RGS 10100	Key		2
53	RGS 11000	Key		7

Complete chassis parts list

54	RGS 16750	Key		1
55	RGS 6033	Ball bearing		1
56	RGS 11124	Guide pulley		3
57	RGS 10818	Wheel		6
58	RGS 10204	Cotter pin		8
59	RGS 10497	Grease nipple		8
60	RGS 11018	Grease nipple		3
61	RGS 10628	Grease nipple		1
62	RGS 10807	Page marker		2
63	RGS 10219	Rivet		2
64	RGS 10259	Flat handle		3
65	RGS 10147	Hex head screw M5x12		6
66	RGS 10149	Hexagon head screw M6x10		6
67	RGS 10159	Hexagon head screw M6x16		1
68	RGS 10648	Hexagon head screw M6x25		4
69	RGS 10619	Hexagon head screw M6x35		4
70	RGS 10150	Hexagon head screw M8x12		2
71	RGS 10146	Hexagon head screw M8x20		26
72	RGS 10636	Hexagon head screw M8x30		21
73	RGS 10155	Hexagon head screw M8x40		9
74	RGS 10167	Hexagon head screw M10x25		1
75	RGS 10151	Hexagon head screw M12x30		1
76	RGS 10725	Hexagon head screw M12x80		1
77	RGS 10797	Hexagon head screw M12x100		1
78	RGS 10595	Hexagon head screw M10x40		2
79	RGS 10163	Hexagon head screw M12x120		1
80	RGS 10222	Countersunk screw M6x35		3
81	RGS 10171	Countersunk screw M12x40		1
82	RGS 10215	M5x25 pan head screw		4
83	RGS 10175	M8x12 threaded pin		2
84	RGS 10184	Hex nut M5		4
85	RGS 10493	Hex nut M6		15
86	RGS 10185	Hex nut M8		18
87	RGS 10179	Hex nut M12		3
88	RGS 10759	Hex nut M8		44
89	RGS 10724	Hex nut M12		2
90	RGS 10639	Washer		8
91	RGS 10194	Washer		3
92	RGS 10107	Washer		6
93	RGS 10550	Washer		5
94	RGS 10197	Washer		13
95	RGS 10134	Spring washer A8		28
96	RGS 10135	Spring Washer A10		2
97	RGS 10411	DU bushing		8
98	RGS 10410	DU socket		2
99	RGS 10437	Flange bushing		2
100	RGS 11128	Sleeve		8
101	RGS 17253	Drive shaft		1
102	RGS 17254	Brake shaft		1
103	RGS 17249	Threaded bearing profile		1
104	RGS 10216	Adjustable washer 25x35x1		16

Complete funnel

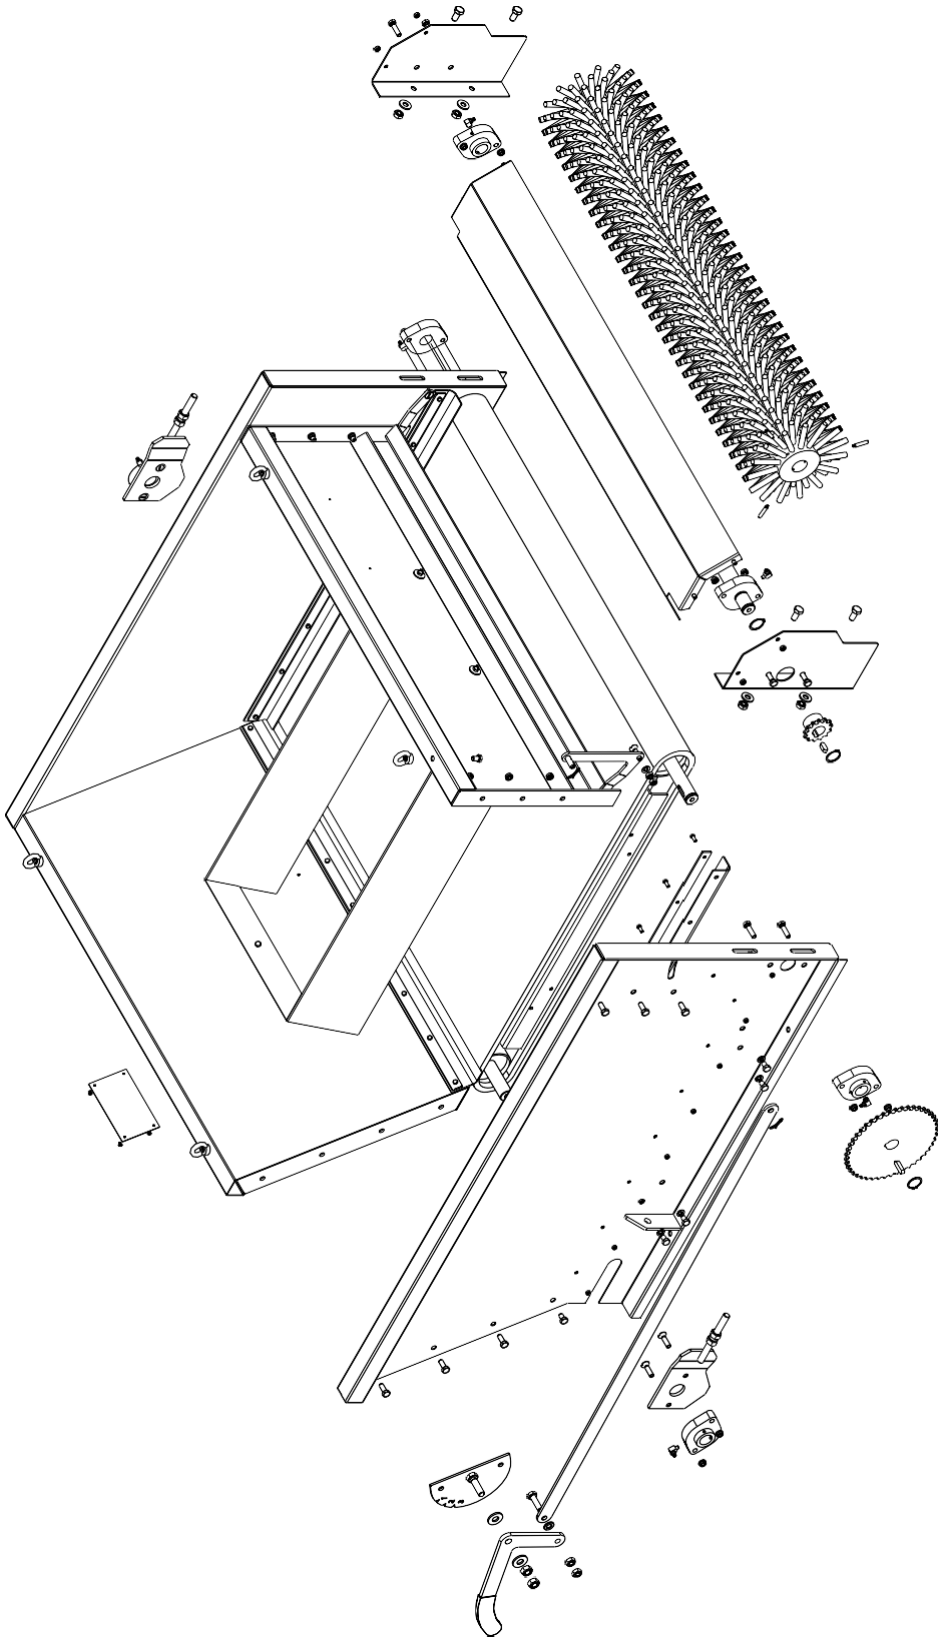


Fig. 7. Complete funnel

Complete funnel

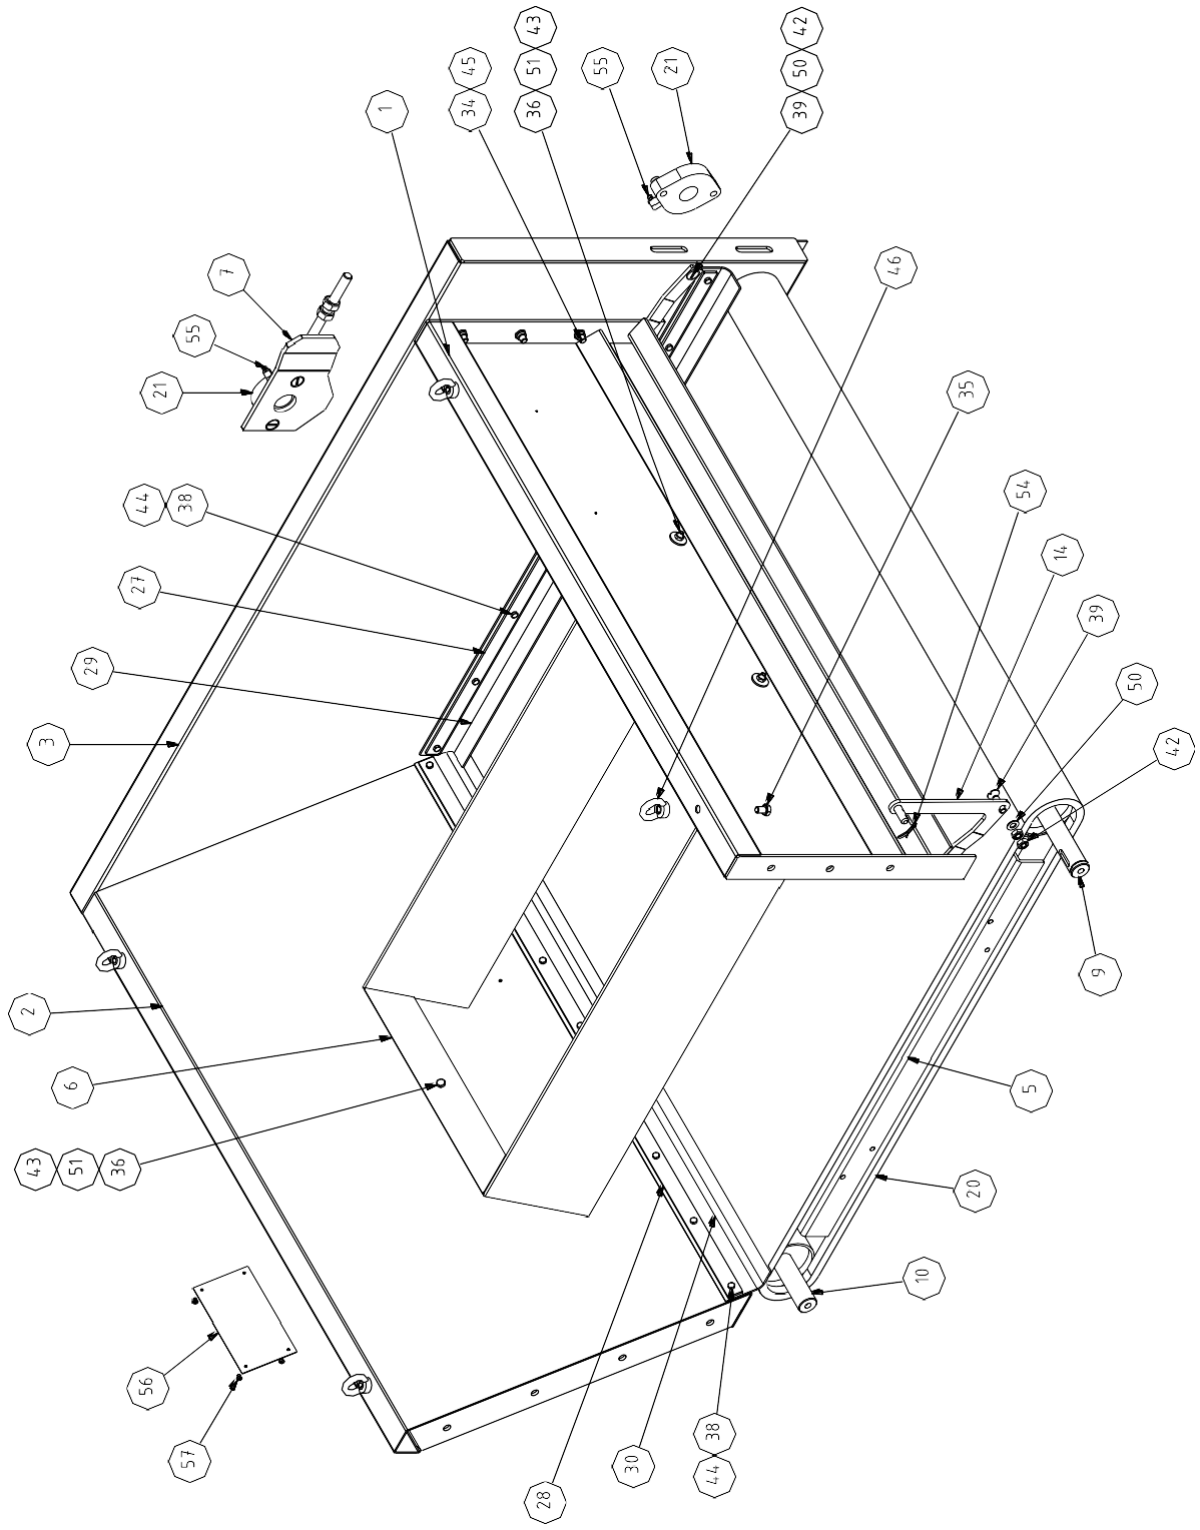


Fig. 8. Complete funnel

Complete funnel

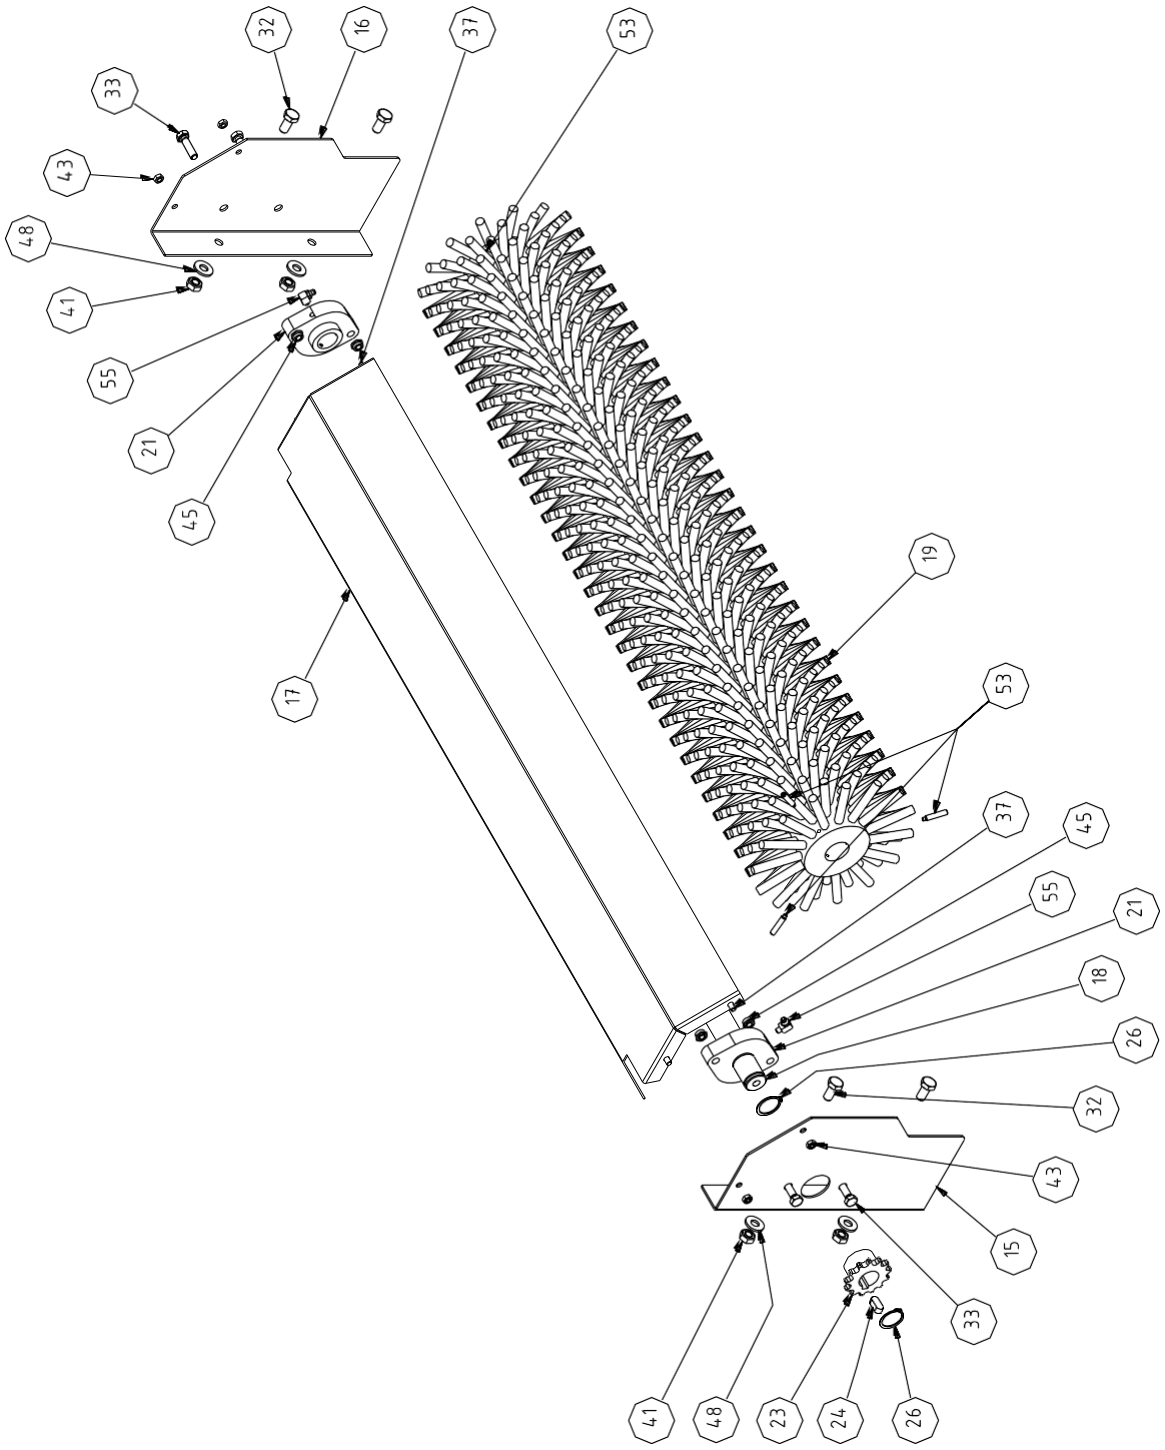


Fig. 9. Funnel, complete

Complete funnel

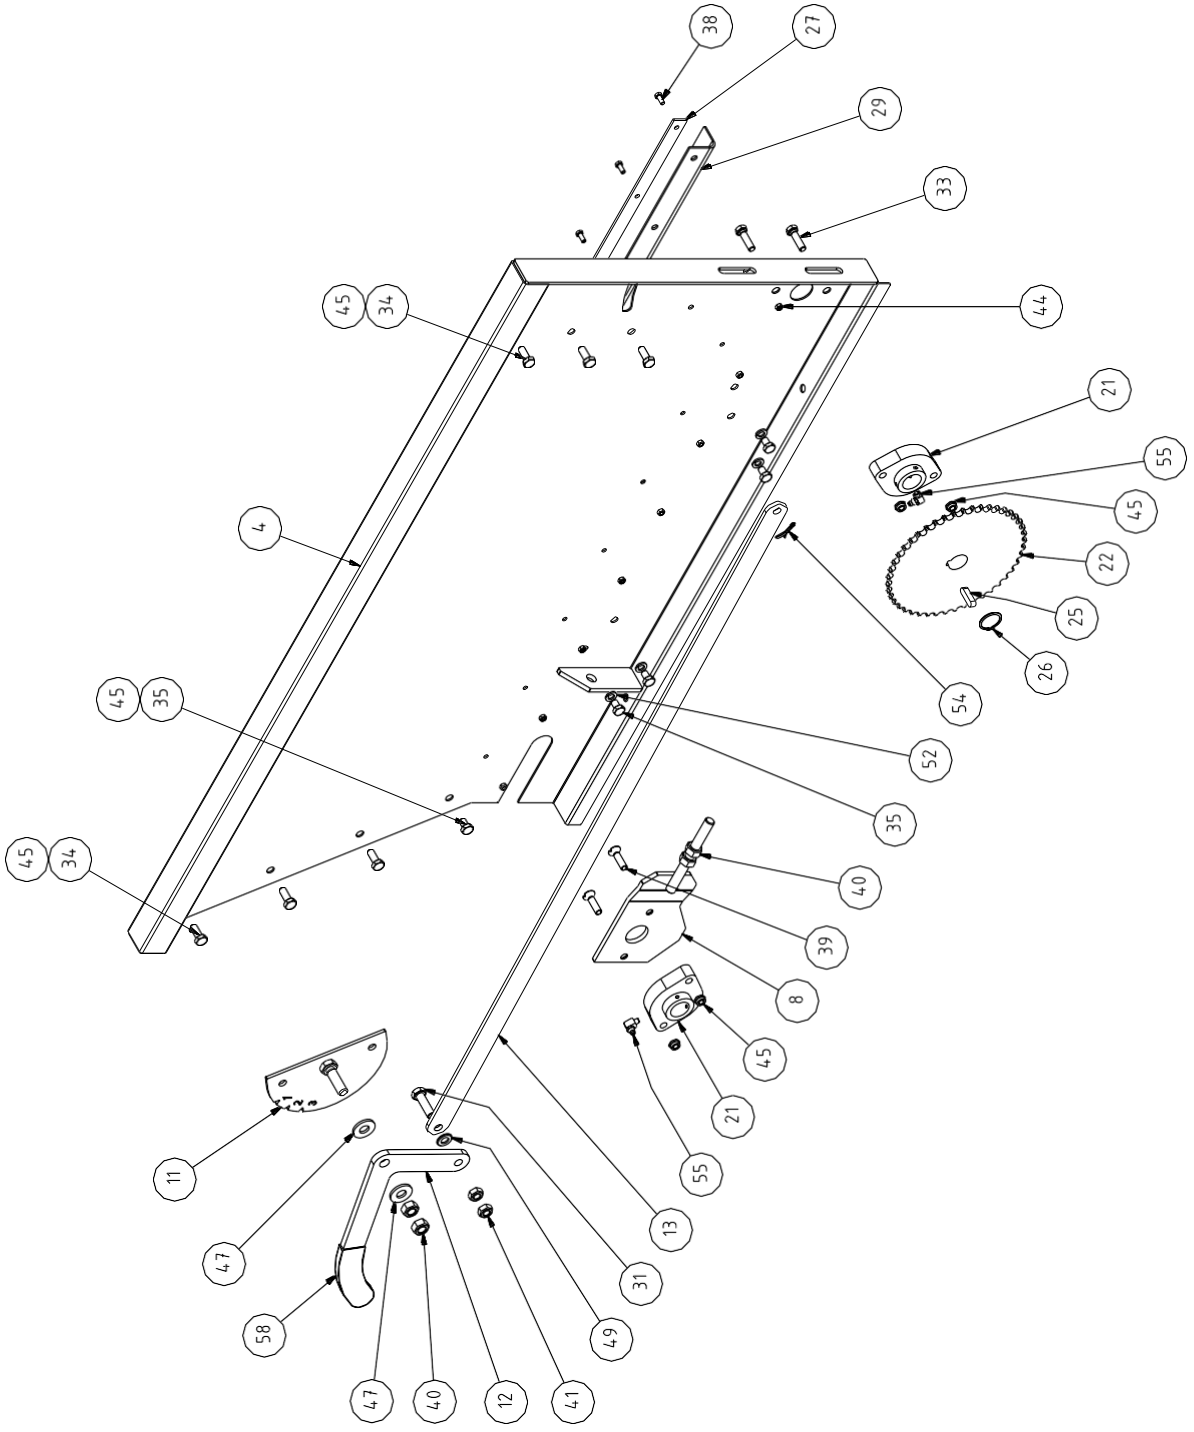


Fig. 10. Complete hopper

Spare parts list for complete hopper

Part	Part Number	Description	Remarks	Quantity
1	RGS 16677	Back panel		1
2	RGS 16678	Front panel		1
3	RGS 16679	Right side panel		1
4	RGS 16682	Left side panel		1
5	RGS 16684	Floor support		1
6	RGS 16733	Wedge angle		1
7	RGS 16680	Tension bolt, right	as shown	1
8	RGS 16680	Tension screw, left	mirror image	1
9	RGS 16690	Drive roller		1
10	RGS 16691	Tension roller		1
11	RGS 16694	Washer		1
12	RGS 11067	Lever		1
13	RGS 11066	Flat bar for slide tab		1
14	RGS 16693	Slider		1
15	RGS 11049	Left brush holder		1
16	RGS 11053	Brush bearing bracket, right		1
17	RGS 11077	Brush guard		1
18	RGS 16685	Brush shaft		1
19	RGS 10174	Spreader roller	Consists of 10 segments	1
20	RGS 10806	Conveyor belt		1
21	RGS 10594	Bearing		6
22	RGS 16686	Sprocket		1
23	RGS 15452	Sprocket		1
24	RGS 10100	Key		1
25	RGS 11000	Key		1
26	RGS 11008	Retaining ring		3
27	RGS 11059	Rubber flat bar, side		2
28	RGS 11060	Rubber flat bar, front		1
29	RGS 11062	Sidewall rubber		2
30	RGS 11061	Front panel rubber		1
31	RGS 10655	Hex head screw M10x35		1
32	RGS 10148	Hexagon head screw M10x20		4
33	RGS 10636	Hexagon head screw M8x30		8
34	RGS 10146	Hexagon head screw M8x20		12
35	RGS 10150	Hexagon head screw M8x12		14
36	RGS 10159	Hexagon head screw M6x16		3
37	RGS 10149	Hexagon head screw M6x10		4
38	RGS 10147	Hexagon head screw M5x12		25
39	RGS 10615	Countersunk screw M8x30		6
40	RGS 10179	Hex nut M12		6
41	RGS 10178	Hex nut M10		6
42	RGS 10185	Hex nut M8		4
43	RGS 10493	Hex nut M6		7
44	RGS 10184	Hex nut M5		25
45	RGS 10759	Hex nut M8		26
46	RGS 10126	Ring nut M8		4
47	RGS 10052	Clamping disc 12		2
48	RGS 10054	Clamping disc 10		4
49	RGS 10196	Washer		1
50	RGS 10550	Washer		2

Spare Parts List: Complete Hopper

51	RGS 10194	Washer		3
52	RGS 10134	Spring washer A8		8
53	RGS 10358	M6x30 set screw		6
54	RGS 10204	Cotter pin		2
55	RGS 10007	Grease nipple		6
56	RGS 10533	Nameplate		1
57	RGS 10220	Rivet		4
58	RGS 10267	Flat handle		1

Throttle Cable, Complete

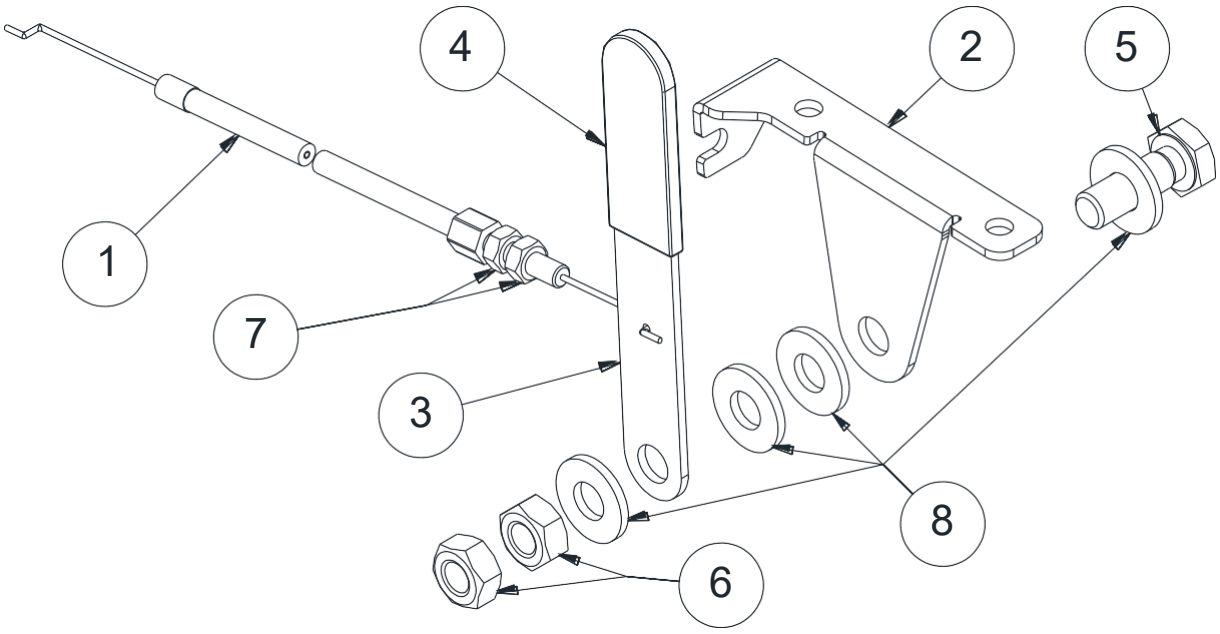


Fig. 11. Complete throttle cable

Spare parts list: Complete throttle cable

1	RGS 11237	Cable		1
2	RGS 17354	Angled throttle cable lever		1
3	RGS 17353	Throttle cable lever		1
4	RGS 11236	Flat handle		1
5	RGS 10144	Hex head screw M10x30		1
6	RGS 10178	Hex nut M10		2
7	RGS 10493	Hex nut M6		2
8	RGS 10054	Clamping disc -10		4